Pulse Valve for Dust Collector (

(RoHS)

Solenoid Valve Type | SMARTVENT Type | Air Operated Type



 A pilot valve enclosure has been added. p. 2

Built-in solenoid valve for air operated drive

 A bulkhead fitting has been added. p. 5



IP67/IP65 For details, refer to page 4.

Air

ATEX Compliant

56-JSXF Series 55-JSXFA Series p.41

10 million cycles*1 or more

Based on SMC's specific testing conditions (JSXF = 06)

High peak pressure and low air consumption

Peak pressure

15%*2 increase

Air consumption

35%*2 reduction


Fluid temperature:

-40 to 60°C

Can be used in a wide range of temperatures

Peak pressure New model: After first discharging a high Air consumption peak pressure, fine particles can be efficiently removed. Existing model: Air consumption mpact force 35% reduction *2 When the solenoid valve or pilot valve mounted on the JSXF□□□-06 is energized for 100 ms (ON time) **OFF** response time: 45% reduction

Variations

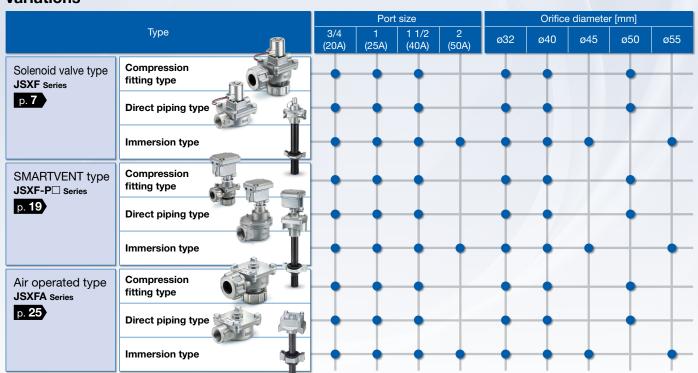

JSXF/JSXFA Series




Solenoid Valve Type SMARTVENT Type Air Operated Type


SMARTVENT Type

No control box required Allows for reduced wiring

The solenoid valve type features a built-in control board.

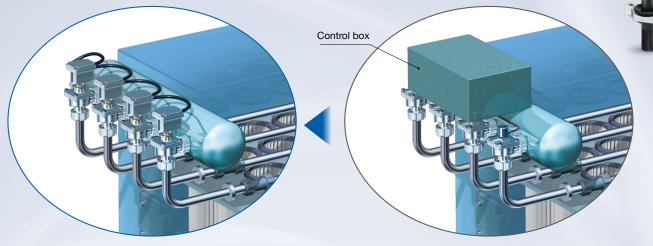

A single base valve can control up to max. 31 remote valves!

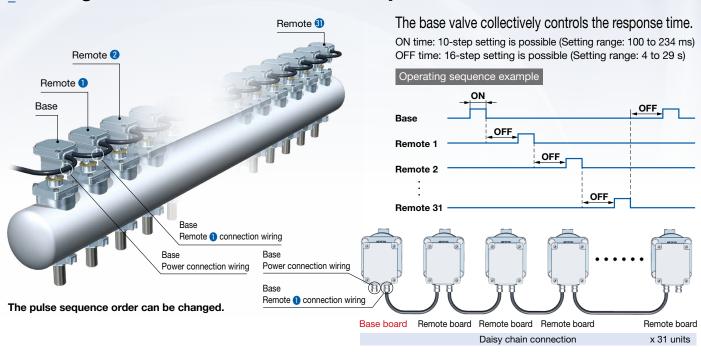

Filter clogging can be detected when used in combination with a differential pressure sensor (provided by the customer).

Differential pressure sensor installation

Operation sequence diagram


Threshold value
Differential pressure sensor

Base
Remote 1

Remote 2

...

Remote 31

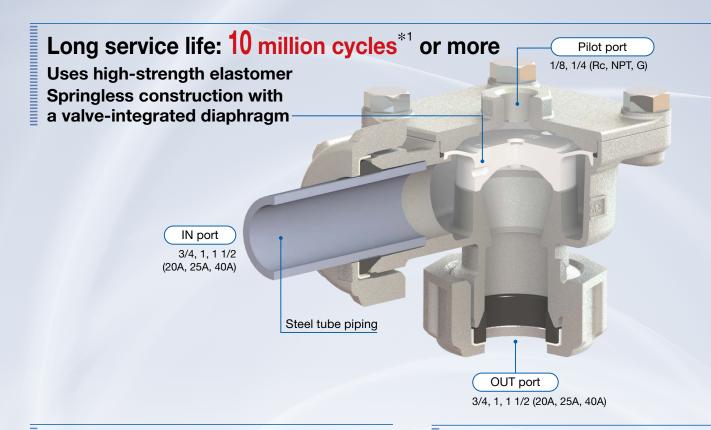

OFF response time: **45**%*^{1,*2} reduction

Easier maintenance

The springless diaphragm allows for easy maintenance of the valve. A main valve and sub-valve (for 40A) are included in the maintenance kit.

Flow rate characteristics: 40%*1,*2 increase

Optimal design for the internal geometry

No need to weld the tank piping



- *1 Based on SMC's specific testing conditions (JSXFA-06, Pilot valve orifice of ø5 mm or larger, Excludes made-to-order option "A")
- *2 Compared with the existing SMC model


New A pilot valve enclosure has been added.

- Access to the front allows for greater maintainability.
- Compatible with 6/8 stations





Solenoid Valve Type SMARTVENT Type Air Operated Type

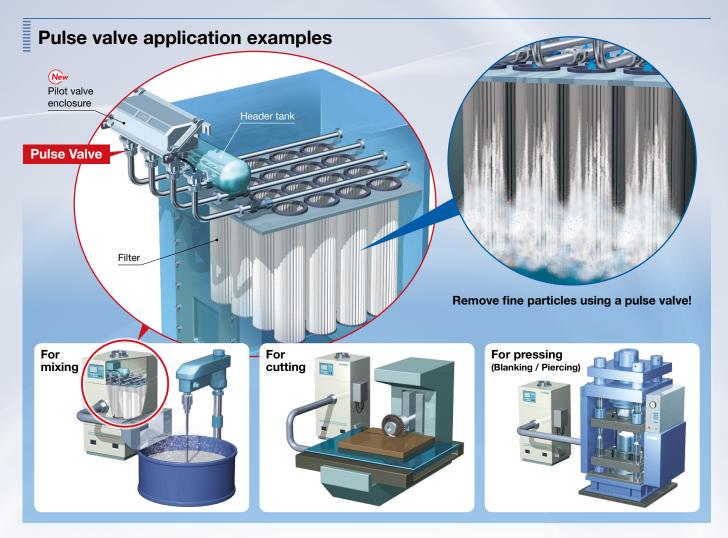

Pulse blow can be used in various industries!



Series Variations

Solenoid Valve Type p.7




			Orifice	diame	eter		Thread	Options/	;	Standar	ds	E	nclosur	'e
Piping	Port size	ø32	ø40	ø45	ø50	ø55 '	type	Made to order	(€*	UK*1 CA	ATEX compliant	IP67	IP65	NEMA4
Compression fitting type	3/4 (20A)	ø 32			1					•	p. 39		*2	
	1 (25A)		940		!					•	p. 39		*2	
(56-)JSXFE Series	1 1/2 (40A)			Q	50			Options		•	p. 39		*2	
Direct piping type	3/4 (20A)	Ø 32						· Silencer (3/4, 1, 1 1/2, 2) p. 15	•	•	p. 39	•	*2	
	1 (25A)		940				Rc	Cable for M12 connector (1000, 2000,		•	p. 39		*2	
(56-)JSXFF Series	1 1/2 (40A)			· · ·	50		NPT G	5000 mm) p. 17		•	p. 39		*2	
Immersion type	3/4 (20A) Tank size: 4, 5 inch	Ø 32			1			Made to order Tank hole dia.: ø76			p. 39		*2	
	1 (25A) Tank size:		940					(1 1/2 6-inch tank) p. 37			p. 39		*2	
	5, 6 inch 1 1/2 (40A)			ø4	5								*2	
	Tank size: 6, 8 inch 2 (50A)			0-1							p. 39		*2	
(56-)JSXFH Series *1 Differs depending on the	Tank size: 8, 10 inch					ø 55					p. 39		*2	

^{*1} Differs depending on the voltage and electrical entry. For details, refer to page 7. *2 Only the DIN connector

SMARTVENT Type p. 19



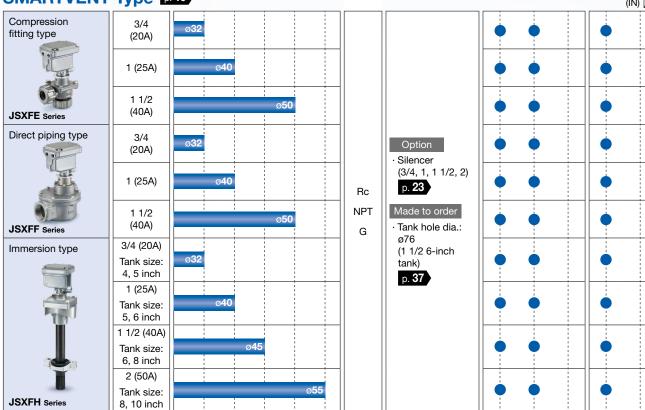

Pulse Valve Valve for Dust Collector JSXF/JSXFA Series

Solenoid Valve Type SMARTVENT Type Air Operated Type

Series Variations

Air Operated Type p. 25



			Orifice	diame	eter		-	0.11.		Stand	dards		Enclosu	re
Piping	Port size	ø32	ø40	ø45 1	ø50	ø55 ı	Thread type	Options/ Made to order	C	€ 5	K ATEX Compliant	IP67	IP65	NEMA4
Compression fitting type	3/4 (20A)	ø 32									p. 41			
	1 (25A)		40								p. 41			
(55-)JSXFAE Series	1 1/2 (40A)				>50			Option			p. 41			
Direct piping type	3/4 (20A)	ø 32						· Silencer (1 1/2, 2) p. 35			p. 41			
	1 (25A)		40				Rc	Made to order Tank hole dia.:			p. 41			
(55-)JSXFAF Series	1 1/2 (40A)				>50		NPT G	ø76 (1 1/2 6-inch tank)			p. 41			
Immersion type	3/4 (20A) Tank size: 4, 5 inch	ø 32						p. 37 · Special pilot valve			p. 41			
	1 (25A) Tank size:		×40					orifice diameter (3/4, 1)			p. 41			
	5, 6 inch 1 1/2 (40A)			-45										
	Tank size: 6, 8 inch 2 (50A)			945							p. 41			
(55-)JSXFAH Series	Tank size: 8, 10 inch				C	9 55					p. 41			

Pilot Valve Enclosure p. 43

	Number of	Number of Port size		Thread type				Standards				Enclosure	
	enclosure stations	N port	(*1	UK*1 CA	ATEX compliant	IP66	NEMA4					
New JSXFM Series	6 stations	1/8	1/2 (1 port)	Rc NPT G	NPT	· Lid catch							
	8 stations	1/6	3/4 (2 ports)		G	mechanism · Bracket							

^{*1} Only applicable to the 24 VDC rated voltage type

Bulkhead Fitting p. 49

	Piping	Port size	Max. plate thickness [mm]	Mounting hole diameter [mmø]				
New		3/4 (20A)		ø42 to ø51				
JSXFN Series	Double Single	1 (25A)	8	ø54 to ø62				
		1 1/2 (40A)		ø69 to ø78				



p. 52

6

CONTENTS

Pulse Valve Valve for Dust Collector




Compression fitting type

Compression







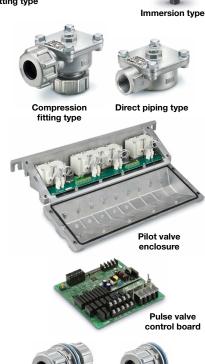

D	Solenoid Valve Type JSXF Series		
	How to Order ·····		
	Specifications		
	Construction ·····		
	Dimensionsp		
	Replacement Parts		
	Option ······	Э.	17
	SMARTVENT Type JSXF-P□ Series		
	How to Orderp	o.	19
	Specifications	o.	20
	Construction		
	Dimensions		
	Replacement Parts	٥.	23
	Option ······	٥.	24
	Air On eveted Time ICVEA		
	Air Operated Type JSXFA Series	_	0.5
	How to Order Specifications Specifications). -	25
	Construction). -	20
	Dimensions		
	Replacement Parts	٥.	JC
۷	orking Principlep	э.	36
	Semi-standard Valves		
	Immersion Type: Made to Order ······	1	37
	ATEX Compliant Solenoid Valve Type 56-JSXF series		
	ATEX Compliant Goldfold Valve Type 55-JSXFA Series		
		۶.	
	Pilot Valve Enclosure JSXFM Series		
	How to Order ···································		
	Specifications		
	Construction		
	Dimensions		
	Bracket Mounting		
	Replacement Partsp	Э.	46
	Dedicated Controller for Operation VXFC Series — p	э.	47
	Bulkhead Fitting JSXFN Series		
	How to Order	1	⊿ c
	Specifications		
	Construction		
	Dimensionsr		

Glossary of Terms

Specific Product Precautions

Pulse Valve For Dust Collector

Solenoid Valve Type

JSXF Series






Direct piping

type

SMARTVENT Type ▶ p. 19

Air Operated Type ▶ p. 25

How to Order

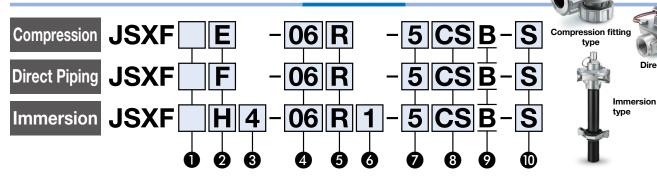

Valve type

Nil Solenoid valve

2 Piping

E	Compression fitting type*1	
F	Direct piping type	
н	Immersion type*2	1

- *1 Seals and washers are included.
- *2 The valve and pipe do not come assembled.

3 Tank size (JSXFH only)

4	4 inch				
5	5 inch				
6	6 inch				
8	8 inch				
10	10 inch				

4 Port size*1

06	3/4 (20A)
10	1 (25A)
14	1 1/2 (40A)
20*2	2 (50A)

- *1 For port size selection, refer to the "Variations for Port Size and Option" table below.
- *2 Port size 20 is only available for the JSXFH.

6 OUT port piping configuration (JSXFH only)

Symbol	Length	G thread	Appearance			
1	Short	None	2112			
2	Long	None				
3	Short	Yes	G thread			
4	Long	ies				

s for Port able below

is only available H.
7 Rated voltage

AC	
Symbol	Rated voltage
1	100 VAC
2	200 VAC
3	120 VAC
3	(110 VAC)
4	220 VAC
7	240 VAC
J	230 VAC

	DC	
1	Symbol	Rated voltage
1	5	24 VDC

NPT

G

Thread type

N

8 Electrical entry

$\overline{}$	O Electrical entry					
Symbol	Electrical entry		CE/UKCA-compliant			
G	Grommet*1		24 VDC			
00	Grommet with PCB		100 VAC			
GS	(With surge voltage suppressor)		24 VDC			
cs	Conduit (With surge voltage suppressor)		All voltages			
DS	DIN terminal (With surge voltage suppressor)		All voltages			
DZ	DIN terminal with light (With surge voltage suppressor)		All voltages			
DN	DIN terminal without connector (With surge voltage suppressor)		All voltages			
WN	M12 connector*2 (With surge voltage suppressor)		All voltages			

- *1 Only 24 VDC can be selected for the rated voltage.
- *2 A cable for the M12 connector is not included with the product. Refer to "Option" on page 17 to order it separately.

9 Fluid and ambient temperatures

В	−40 to 60°C

Silencer Nil Without

Shipped together with the

product Refer to "Replacement Parts" on page 15.



Made to Order

Tank hole dia.: ø76 (Port size 14, 6-inch tank)

p. 37

Variations for Port Size and Option

variations id	variations for Port Size and Option					
Model	Tank size	Port size				
Model	Tarik Size	06	10	14	20	
JSXFE	_	•	•	•	_	
JSXFF	_	•	•	•	_	
	4 inch	•	_	_	_	
	5 inch	•	•	_	_	
JSXFH	6 inch	_	•	•	_	
	8 inch	_	_	•	•	
	10 inch	_	_	_	•	
Silen	•	•	•	•		



Pulse Valve Valve for Dust Collector Solenoid Valve Type JSXF Series

Specifications

Common Specifications

	John Geomeanons				
	Valve construction		Pilot operated diaphragm		
	Valve type		Normally closed (N.C.)		
	Fluid		Air		
	Withstand pressure	[MPa]	1.5		
Valve	Min. operating pressure differential	[MPa]	0.1		
	Max. operating pressure differential	[MPa]	0.9		
specifications	Max. system pressure	[MPa]	0.9		
	Fluid temperature	[°C]	-40*1 to 60		
	Ambient temperature	[°C]	-40 to 60		
	Enclosure		IP67 (IP65 for the DIN connector)*2		
	Standards*3		CE/UKCA		
	Allowable voltage fluctua	ation	±10% of the rated voltage		
Coil	Allowable leakage	AC	5% or less of the rated voltage		
	voltage	DC	2% or less of the rated voltage		
specifications	Apparent power*4, *5	AC	18 VA		
	Power consumption*4	DC	12 W		

- *1 No condensation
- *2 If water enters the product, it may result in operation failure or breakage.

 Therefore, take appropriate measures to prevent water from entering the product when used in an environment where it is constantly exposed to water.
- *3 Conformance to standards varies depending on the model. For details, refer to page 7.
- *4 Power consumption/Apparent power: The value at an ambient temperature of 20°C and when the rated voltage is applied (Variation: ±10%)
- *5 There is no difference in the frequency and the inrush and energized apparent power, since a rectifying circuit is used in the AC.

Be sure to read "Specific Product Precautions" before handling.

Individual Specifications: Compression Fitting Type / Direct Piping Type

S	eries	JSXFE/F				
36	eries	06	10	14		
Orifice diameter [mm]		ø32	ø40	ø50		
Port size		3/4	1	1 1/2		
Weight*1 [g]	Compression	740	1,230	2,100		
Weight*1 [g]	Direct piping	560	820	1,480		

*1 Indicates case of grommet type Add 20 g for grommet with PCB, 70 g for conduit, 50 g for DIN terminal, and 15 g for M12 connector.

JSXFE Series

Symbol

JSXFF Series



JSXFH Series

Individual Specifications: Immersion Type

mairiaaa	namada opecinications. Infiniersion Type									
	Series		JSXFH							
			0	6	1	0	1	4	2	0
Orifice diameter [mm]		ø32		Ø4	40	Ø4	45	ø:	55	
Port size		3/4 1		1 1/2		2				
Tank size		ANSI	4	5	5	6	6	8	8	10
		1	1,380	1,390	2,050	2,110	2,960	3,080	4,670	4,840
Weight*1	Piping	2	1,410	1,430	2,100	2,210	3,120	3,310	4,990	5,150
[g]	configuration	3	1,380	1,390	2,050	2,110	2,960	3,080	4,670	4,840
		4	1,410	1,430	2,100	2,210	3,120	3,310	4,990	5,150


*1 Indicates case of grommet type Add 20 g for grommet with PCB, 70 g for conduit, 50 g for DIN terminal, and 15 g for M12 connector.

Solenoid Valve Type **JSXF** Series

Construction

JSXFE/Compression Fitting Type


Port sizes 06, 10

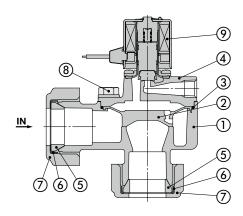

Component Parts

No.	Description	Material
1	Body	ADC
2	Main valve	Resin
3	O-ring	NBR
4	Bonnet	ADC
5	Seal	NBR
6	Washer	Fe (Chromating)
7	Compression nut	ADC
8	Hexagon bolt	Stainless steel
9	Pilot valve	_


Port size 14

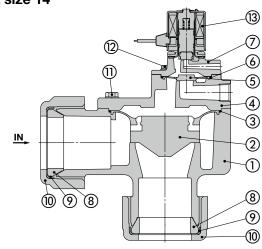

Component Parts							
No.	Description	Material	No.	Description	Material		
1	Body	ADC	8	Seal	NBR		
2	Main valve	Resin	9	Washer	Fe (Chromating)		
3	O-ring	NBR	10	Compression nut	ADC		
4	Bonnet	ADC	11	Hexagon bolt	Stainless steel		
5	Sub-valve	Resin	12	Cross recessed round head screw	Stainless steel		
6	O-ring	NBR	13	Pilot valve	_		
7	Bonnet	ADC					

JSXFF/Direct Piping Type


Port sizes 06, 10

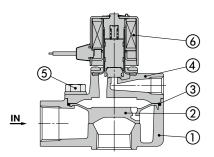

Component Parts

No.	Description	Material
1	Body	ADC
2	Main valve	Resin
3	O-ring	NBR
4	Bonnet	ADC
5	Hexagon bolt	Stainless steel
6	Pilot valve	_

Port size 14

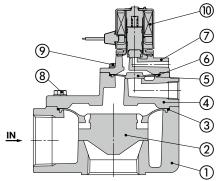

Component Parts


No.	Description	Material		
1	Body	ADC		
2	Main valve	Resin		
3	O-ring	NBR		
4	Bonnet	ADC		
5	Sub-valve	Resin		
6	O-ring	NBR		
7	Bonnet	ADC		
8	Hexagon bolt	Stainless steel		
9	Cross recessed round head screw	Stainless steel		
10	Pilot valve	_		

□SXF-P□

Construction

JSXFH/Immersion Type

Port sizes 06, 10

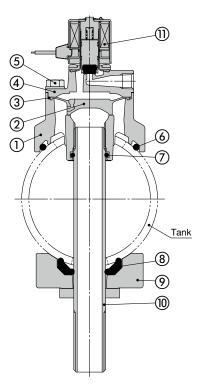


* The tank should be provided by the customer.

Component Parts

No. Description Material 1 Body ADC 2 Main valve Resin 3 O-ring NBR 4 Bonnet ADC 5 Hexagon bolt Stainless steel 6 O-ring NBR 7 O-ring NBR 8 Gasket NBR 9 Bottom support ADC 10 Outlet pipe assembly STKM + SS400 11 Pilot valve —			
2 Main valve Resin 3 O-ring NBR 4 Bonnet ADC 5 Hexagon bolt Stainless steel 6 O-ring NBR 7 O-ring NBR 8 Gasket NBR 9 Bottom support ADC 10 Outlet pipe assembly STKM + SS400	No.	Description	Material
3 O-ring NBR 4 Bonnet ADC 5 Hexagon bolt Stainless steel 6 O-ring NBR 7 O-ring NBR 8 Gasket NBR 9 Bottom support ADC 10 Outlet pipe assembly STKM + SS400	1	Body	ADC
4 Bonnet ADC 5 Hexagon bolt Stainless steel 6 O-ring NBR 7 O-ring NBR 8 Gasket NBR 9 Bottom support ADC 10 Outlet pipe assembly STKM + SS400	2	Main valve	Resin
5 Hexagon bolt Stainless steel 6 O-ring NBR 7 O-ring NBR 8 Gasket NBR 9 Bottom support ADC 10 Outlet pipe assembly STKM + SS400	3	O-ring	NBR
6 O-ring NBR 7 O-ring NBR 8 Gasket NBR 9 Bottom support ADC 10 Outlet pipe assembly STKM + SS400	4	Bonnet	ADC
7 O-ring NBR 8 Gasket NBR 9 Bottom support ADC 10 Outlet pipe assembly STKM + SS400	5	Hexagon bolt	Stainless steel
8 Gasket NBR 9 Bottom support ADC 10 Outlet pipe assembly STKM + SS400	6	O-ring	NBR
9 Bottom support ADC 10 Outlet pipe assembly STKM + SS400	7	O-ring	NBR
10 Outlet pipe assembly STKM + SS400	8	Gasket	NBR
	9	Bottom support	ADC
11 Pilot valve –	10	Outlet pipe assembly	STKM + SS400
	11	Pilot valve	_

Port sizes 14, 20

Pulse Valve Valve for Dust Collector

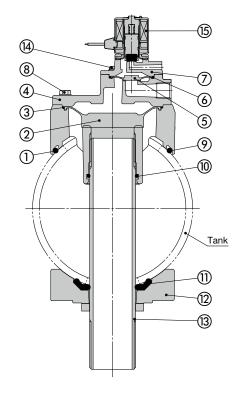

* The tank should be provided by the customer.

Solenoid Valve Type


JSXF Series

Component Parts

<u> </u>		
No.	Description	Material
1	Body	ADC
2	Main valve	Resin
3	O-ring	NBR
4	Bonnet	ADC
5	Sub-valve	Resin
6	O-ring	NBR
7	Bonnet	ADC
8	Hexagon bolt	Stainless steel
9	O-ring	NBR
10	O-ring	NBR
11	Gasket	NBR
12	Bottom support	ADC
13	Outlet pipe assembly	STKM + SS400
14	Cross recessed round head screw	Stainless steel
15	Pilot valve	_



Dimensions: **JSXFE**/Compression Fitting Type

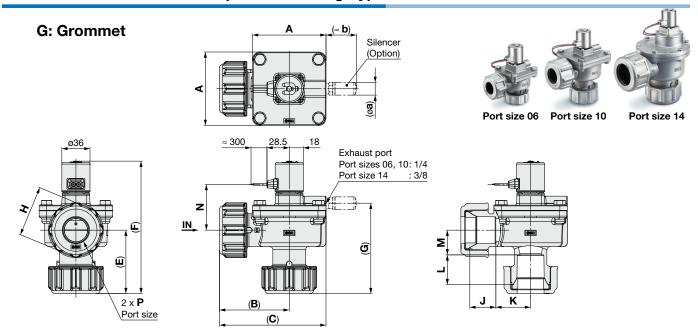



GS: Grommet with PCB


CS: Conduit

DS: DIN terminal

DZ: DIN terminal with light

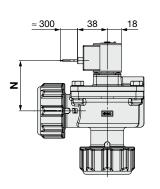


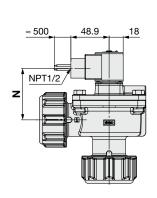


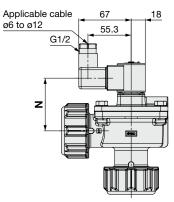

DN: Without DIN connector

WN: M12 connector

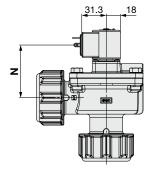

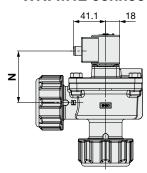


Dimensions												[mm]
Model	Port size P	Α	(B)	(C)	(E)	(F)	(G)	Н	J	K	L	М
JSXFE-06	3/4	74	76	113	54	136	82	54	25.4	41.3	25.4	18.8
JSXFE-10	1	94	90	137	82	170	116	65	33.3	44.4	38.1	31.6
JSXFF-14	1 1/2	ø126	117	178	92	217	139	80	51.3	50.7	45	33

The dimensions in () show the dimensions after tightening.

Model	Port size	Grommet	Grommet with PCB	Conduit	DIN terminal	Without DIN connector	M12 connector	With si	ilencer
Model	P		а	b					
JSXFE-06	3/4	52.6	58.3	59.9	61.4	61.4	60.2	16.5	39
JSXFE-10	1	58.6	64.3	65.9	67.4	67.4	66.2	10.5	39
JSXFE-14	1 1/2	95.6	101.3	102.9	104.4	104.4	103.2	20	52

 Dimensions: **JSXFF**/Direct Piping Type







Pulse Valve Valve for Dust Collector




Solenoid Valve Type


JSXF Series



Port size 06

Port size 10

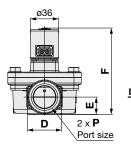

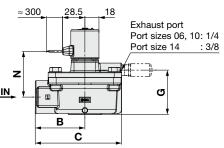



GS: Grommet with PCB


CS: Conduit

DS: DIN terminal


DZ: DIN terminal with light

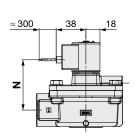


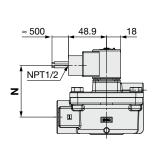

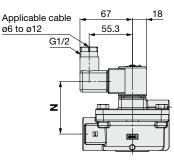

DN: Without DIN connector WN: M12 connector

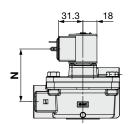


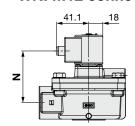

Dimensions								[mm]
Model	Port size P	Α	В	С	D	E	F	G
JSXFF-06	3/4	74	55.5	92.5	36	19.3	101.6	47.8
JSXFF-10	1	94	63.5	110.5	44	22.2	110.5	56.7
JSXFF-14	1 1/2	ø126	75.1	136.6	65	32	157.3	79

	, –	2.20							
Model	Port size	Grommet	Grommet with PCB	Conduit	DIN terminal	Without DIN connector	M12 connector	With s	ilencer
Model	P	N							b
JSXFF-06	3/4	52.6	58.3	59.9	61.4	61.4	60.2	16.5	39
JSXFF-10	1	58.6	64.3	65.9	67.4	67.4	66.2	16.5	39
.ISXFF-14	1 1/2	95.6	101.3	102.9	104 4	104 4	103.2	20	52



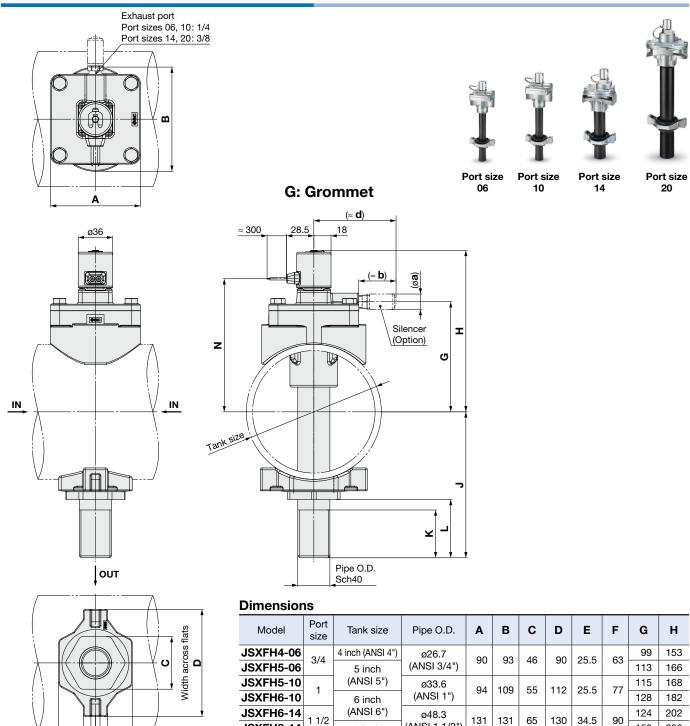

			OUT port piping configuration											
Model	Port		1			2			3			4		
Model	size	J	K	L	J	K	L	J	K	L	J	K	L	
JSXFH4-06	3/4	146 ±5		62	164 ±5		80	146 ±5	G3/4" x 50	62	164 ±5	G3/4" x 70	80	
JSXFH5-06	3/4	153 ±5		56	173 ±5		76	153 ±5	G3/4" x 50	56	173 ±5	G3/4" x 70	76	
JSXFH5-10	-	153 ±5		61	173 ±5		81	153 ±5	G1" x 50	61	173 ±5	G1" x 70	81	
JSXFH6-10	ļ	173 ±5		68	213 ±5	5	108	173 ±5	G1" x 50	68	213 ±5	G1" x 90	108	
JSXFH6-14	1 1/2	169 ±5	_	61	209 ±5	_	101	169 ±5	G1 1/2" x 50	61	209 ±5	G1 1/2" x 90	101	
JSXFH8-14	1 1/2	198 ±5		65	258 ±5		125	198 ±5	G1 1/2" x 50	65	258 ±5	G1 1/2" x 110	125	
JSXFH8-20	2	197 ±5		60	257 ±5		120	197 ±5	G2" x 50	60	257 ±5	G2" x 110	120	
JSXFH10-20		224 ±5		60	284 ±5		120	224 ±5	G2" x 50	60	284 ±5	G2" x 110	120	

168 170 80 160 150

165

34.5

108

228

243

270

(ANSI 1 1/2")

ø60.3

(ANSI 2")

8 inch

(ANSI 8")

10 inch (ANSI 10")

JSXFH8-14

JSXFH8-20

JSXFH10-20

E

Solenoid Valve Type JSXF Series Pulse Valve Valve for Dust Collector


Dimensions: **JSXFH**/Immersion Type


GS: Grommet with PCB


CS: Conduit

DS: DIN terminal

DZ: DIN terminal with light

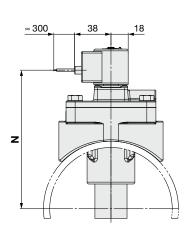


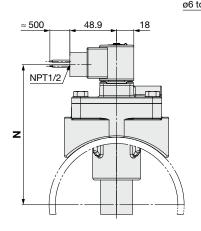

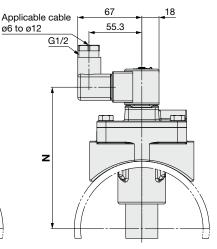

DN: Without DIN connector

WN: M12 connector

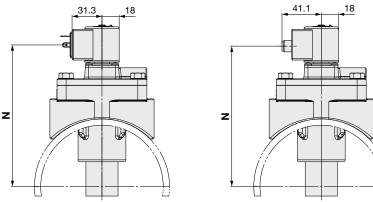

	41.1 18
-	
Î	
_	
Z	
//	
•	


-		-	
1 111	$m \Delta i$	ารic	ne
ווט		IOIL	פווי

Dimensions	3									[mm]
Model	Port	Grommet	Grommet with PCB	Conduit	DIN terminal	Without DIN connector	M12 connector	With	n sile	ncer
iviodei	size			ı	V			а	b	d
JSXFH4-06	3/4	123	129	131	132	132	131			76
JSXFH5-06	3/4	137	142	144	146	146	144	16.5	39	/ 6
JSXFH5-10	4	139	144	146	148	148	146	10.5	39	86
JSXFH6-10	'	152	158	160	161	161	160			80
JSXFH6-14	1 1/2	173	178	180	182	182	180			114
JSXFH8-14	1 1/2	198	204	205	207	207	206	20	52	114
JSXFH8-20	2	213	219	220	222	222	221	20	52	95
JSXFH10-20		240	246	247	249	249	248			95


Recommended Tank Dimensions [mm										[mm]
Model	Port	Taultaina	Tank O.D.	Tank hole pitch	Straigl	nt hole		Tapere	d hole	
Model	size	Tank size	iank O.D.	Р	Q	R	Q	Q'	R	R'
JSXFH4-06	3/4	4 inch (ANSI 4")	ø114.3 ^{+1.6} _{-0.8}	95	55	28	55	61.5	28	31.3
JSXFH5-06	3/4	5 inch	ø141.3 +1.6	95	55	20	55	01.5		31.3
JSXFH5-10	1	(ANSI 5")	Ø141.3 _{-0.8}	100	69	36	69	76	36	39.7
JSXFH6-10	'	6 inch	ø168.3 +1.6	100	09	30	09	'6	30	39.1
JSXFH6-14	1 1/2	(ANSI 6")	Ø106.3 _{-0.8}	135	95	52	95	104	52	56.8
JSXFH8-14	1 1/2	8 inch	ø219.1 ^{+1.6} _{-0.8}	133	95	52	95	104	52	50.6
JSXFH8-20	2	(ANSI 8")	Ø∠ 13.1 _{-0.8}	175	117	62	117	126	62	67
JSXFH10-20		10 inch (ANSI 10")	ø273.1 +2.4 -0.8	173	117	02	117	120	02	07


Recommended Tank Dimensions

* The tank should be provided by the customer.

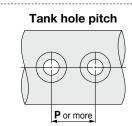

Tank hole machining Straight hole

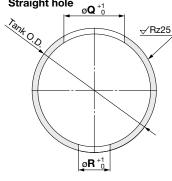

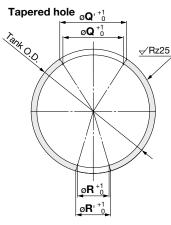




Replacement Parts (Solenoid Valve Type/JSXF□)

		Replacement part number								
Port size	Model	Main valve assembly	Sub-valve assembly	Silencer	Solenoid coil*1					
		(Main valve + O-ring)	(Sub-valve + O-ring)	Silericei	Soleriola coli*					
06	JSXF(E, F, H)□-06□-□□B-(S)	JSXF-06B-KT	_	Rc, G thread: AN20-02						
10	JSXF(E, F, H)□-10□-□□B-(S)	JSXF-10B-KT	_	NPT thread: AN20-N02	JSXF□□-□□-□□B-KT1					
14	JSXF(E, F)□-14□-□□B-(S)	JSXF-14B-KT	JSXF-14B-KT2	De Calerra de ANOCACA						
14	JSXFH□-14□-□□B-(S)	JSXF-14B-1-KT	JSAF-14D-K12	Rc, G thread: AN30-03 NPT thread: AN30-N03	Valve part number					
20	JSXFH□-20□-□□B-(S)	JSXF-20B-KT	JSXF-14B-KT2	INF I IIII Gau. AINSU-INUS						

^{*1} The solenoid coil has a name plate with the product part number printed on it. In addition, the name plate has the marks of all applicable standards printed on it. For the solenoid coil, eligibility for CE marking standard certification varies depending on the electrical entry type and the rated voltage.

When ordering a solenoid coil with different specifications than the valve currently in use, refer to "How to Order" in the catalog to confirm the status of standard compliance.

 DIN Connector Part Nos.



Electrical option	Rated voltage	Connector part no.
	24 VDC	
	100 VAC	
	120 (110) VAC	
None	200 VAC	3G-GDM2A
	220 VAC	
	230 VAC	
	240 VAC	
	24 VDC	GDM2A-L5
	100 VAC	GDM2A-L1
	120 (110) VAC	GDM2A-L1
With light	200 VAC	GDM2A-L2
	220 VAC	GDM2A-L2
	230 VAC	GDM2A-L2
	240 VAC	GDM2A-L2

Gasket Part No. for DIN Connector

VCW20-1-29-1

Clip

VX021N-10S

SMC

Solenoid Valve Type

Main valve

assembly

Main

valve

Body

Pulse Valve Valve for Dust Collector JSXF Series

Replacement Parts (Solenoid Valve Type/JSXF□)

Disassembly/Assembly Procedure

⚠ Caution

- Before disassembly, be sure to turn OFF the power supply and pressure supply, and then release the residual pressure.
- Confirm that the solenoid coil temperature has dropped sufficiently before removing the product.

Disassembly

- 1) Remove the clip, and then remove the solenoid coil.
- Loosen the hexagon bolts (cross recessed round head screws), and remove the bonnet assembly (bonnet), O-ring, and the main valve (sub-valve).

Assembly

- Attach the main valve (sub-valve) to the body. The main valve (sub-valve) has a predetermined mounting direction.
 Assemble the valve referring to Fig. 1.
 - If the valve is assembled incorrectly, it can cause a malfunction.
- 2) Mount the O-ring to the body groove. (See Fig. 2.) After mounting the O-ring, check to make sure that the O-ring is fitted properly into the groove. If it is not in the groove, external leakage and/or operation failure may occur.
- 3) Attach the bonnet assembly (bonnet) to the body.
- 4) Tighten the hexagon bolts (cross recessed round head screws) diagonally. (See Table 1 for the tightening torque.)
- 5) Secure the solenoid coil with a clip. (For details, refer to "Specific Product Precautions" on page 57.)

Table 1. Proper Tightening Torque [N·m]

			F 1 1 1 1 1
JSXF□	-06□	M8	12.5 to 13.8
JSXF□	-10□	M8	12.5 to 13.8
JSXF□-14□	Main valve	M6	5.2 to 5.7
J3AFL-14L	Sub-valve	M4	1.5 to 1.7
JSXF□-20□	Main valve	M8	12.5 to 13.8
JONFU-20U	Sub-valve	M4	1.5 to 1.7


Port sizes 06, 10

 
Port sizes 14, 20
Main valve Sub-valve









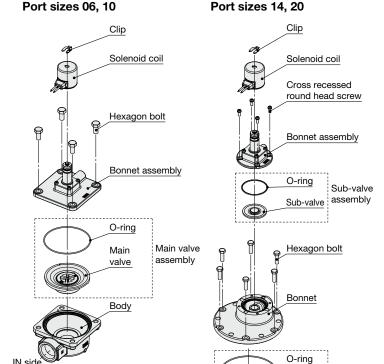



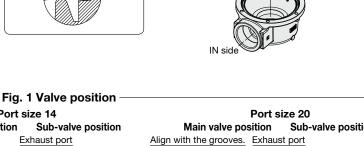


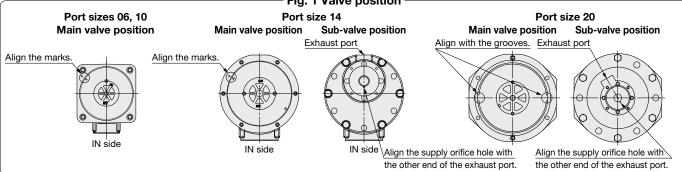

JSXF Series Option


Cable for M12 Connector (Female Connector with Cable)

 The solenoid valve does not come with a cable for the M12 connector. Please order it separately if necessary.



Specifications


Part number		JSX022-30-1-□	JSX022-30-2-□	
Key type		A-coded	B-coded	
	Rated current	4 A		
e	Rated voltage	250 V		
an	Contact resistance	40 mΩ or less		
Rating/Performance	Insulation resistance	1000 MΩ	or more	
ert	Withstand voltage	1500 VAC		
P _P	Operating temperature range	−25 to 70°C		
Ę	Min. bending radius (Fixed)	50 mm		
æ	Protection class	IP67 (Only with screw tightened)		
	Allowable repeated insertion/withdrawal	200		
_	Material of knurl	Brass (Ni plating)		
eria	Contact (Surface treatment)	Copper alloy (Au plating)		
Material	Connector material	PBT		
2	Cover	Soft	PBT	

 

For DC voltages (A-coded)



 Socket connector pin arrangement




* The solenoid valve has no polarity for DC voltages.

For AC voltages (B-coded)



 Socket connector pin arrangement



Pulse Valve

SMARTVENT Type


JSXF-P Series



Solenoid Valve Type ▶ p. 7

Air Operated Type ▶ p. 25

How to Order

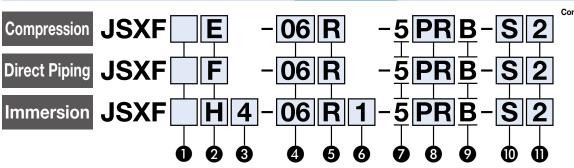



Valve type

Nil Solenoid valve

3 Tank size (JSXFH only)

4	4 inch
5	5 inch
6	6 inch
8	8 inch
10	10 inch

4 Port size*1

06	3/4 (20A)
10	1 (25A)
14	1 1/2 (40A)
20 *2	2 (50A)

- *1 For port size selection, refer to the "Variations for Port Size and Option" table below.
- *2 Port size 20 is only available for the JSXFH.

type

Thread type

R	Rc
N	NPT
F	G

2 Piping

E	Compression fitting type*1	
F	Direct piping type	
Н	Immersion type*2	

- *1 Seals and washers are included.
- *2 The valve and pipe do not come assembled.

OUT port piping configuration (JSXFH only)

(CONTITIONING)				
Symbol	Length	G thread	Appearance	
1	Short	None	Z	
2	Long	None		
3	Short	Yes	Length	
4	Long	162	G thread	

Rated voltage

Symbol	Rated voltage
5	24 VDC

8 Electric control

		Extornal input	(Differential pressure sensor)
Base	-	•	3 holes
		_	
Remote		_	
Base		(●)	
Remote		_	2 holes
	Remote Base	Remote Base	

- *1 When using a differential pressure sensor (provided by the customer), select PP or PBW for the base valve. For base valves with an M12 connector, select PBW regardless of whether or not there is a differential pressure sensor. Either can be used. Use a 2-wire type 4 to 20 mA specification differential pressure sensor.
- *2 Use a straight wiring cable.

Variations for Port Size and Option

Tank size

4 inch

5 inch

6 inch

8 inch

10 inch

Model

JSXFE

JSXFF

JSXFH

Silencer

* A connector cable is available. For details, refer to page 24

06

•

•

Port size

14

•

•

20

10

•

9 Fluid and ambient temperatures

B −40 to 60°C

Silencer

W Choricor		
Nil	Without	
S	With	

- · Shipped together with the product
- · 2 pcs. for 40A and 50A Refer to "Replacement Parts" on page 23.

Electrical entry

The second contract of			
Nil	IN side	Input hole	
2	180° Inverted	Input hole	

It can be changed by the customer. For details, refer to page 54.



Made to Order

Tank hole dia.: ø76 (Port size 14, 6-inch tank) p. 37
--

For more information on using SMARTVENT types, refer to the operation manual. Download it from our website: https://www.smcworld.com



Pulse Valve **JSXF-P** Series

Symbol





JSXFE Series



JSXFF Series



Specifications

Common Specifications

	Valve construction		Pilot operated diaphragm		
	Valve type		Normally closed (N.C.)		
	Fluid		Air		
	Pilot valve orifice dia.	[mm]	ø4.5		
	Withstand pressure	[MPa]	1.5		
Valve	Min. operating pressure differential	[MPa]	0.1		
specifications	Max. operating pressure differential	[MPa]	0.9		
	Max. system pressure	[MPa]	0.9		
	Fluid temperature	[°C]	-40*1 to 60		
	Ambient temperature	[°C]	-40 to 60		
	Enclosure*2		IP67, NEMA4		
	Standards		CE/UKCA		
	Rated voltage	[V]	24 VDC		
Coil	Allowable voltage fluctuation		±10% of the rated voltage		
specifications	Allowable leakage voltage		2% or less of the rated voltage		
	Power consumption*3	[W]	18		
	ON time	[ms]	100 to 234		
Board	OFF time	[s]	4 to 29		
specifications	Current consumption	[mA]	Base: 25 or less Remote: 15 or less*4		

- *1 No condensation
- *2 For IP67 and NEMA4, wired components must be installed in an input hole or the holes must be plugged.
- *3 Power consumption: The value at an ambient temperature of 20°C and when the rated voltage is applied (Variation: ±10%)
- *4 Current consumption per remote valve (It is added to match the number of valves.)

Be sure to read "Specific Product Precautions" before handling.

Weight

weigni										
	Model 06		1	0	1	4	2	0		
JSXFE 1,240		1,6	80	2,6	620	_	_			
JSXFF 1,060		060	1,2	70	2,0	000	-	_		
	Tank size		4	5	5	6	6	8	8	10
*1		1	1,880	1,890	2,500	2,560	3,480	3,600	5,190	5,360
JSXFH	Piping	2	1,910	1,930	2,550	2,660	3,640	3,830	5,510	5,670
	configuration	3	1,880	1,890	2,500	2,560	3,480	3,600	5,190	5,360
		4	1,910	1,930	2,550	2,660	3,640	3,830	5,510	5,670

- *1 The tank weight is not included in the weight table.
- * Add 30 g to the weight for the type with an M12 connector.


M12 Connector Specifications

M12 Connector Specifications				
Key type	A-co	oded		
Rated current	4 A			
Rated voltage	250 V			
Contact resistance	10 mΩ or less			
Insulation resistance	100 MΩ or more			
Operating temperature range	−40 to 85°C			
Protection class	IP67			
Material	Copper alloy			
Base	IN: 2(4)-core	OUT: 3-core		
Remote	IN: 3-core	OUT: 3-core		

JSXF-P Series

Construction

Components other than those shown below are the same as those of the air operated type.

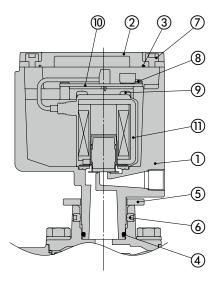


Component Parts

	•	
No.	Description	Material
1	Box	ADC
2	Cover	ADC
3	Gasket	NBR
4	O-ring	NBR
5	Nut	Stainless steel
6	Hexagon socket head set screw	Stainless steel
7	Hexagon socket head cap screw	Stainless steel
8	Cross recessed round head screw	Stainless steel
9	Cross recessed round head screw	Fe
10	Board assembly	_
11	Pilot valve	_

Pulse Valve **JSXF-P** Series

Dimensions (Dimensions other than those shown below are the same as those of the air operated type.)


JSXFE/Compression fitting type

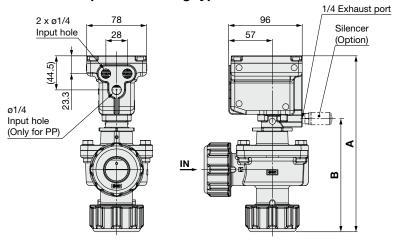


Dimensions [mm]				
Model	Port size	Α	В	
JSXFE-06	3/4	196	114	
JSXFE-10	1	230	148	
JSXFE-14	1 1/2	280	198	

The dimensions indicate the values after screw tightening.

JSXFF/Direct piping type

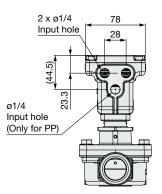


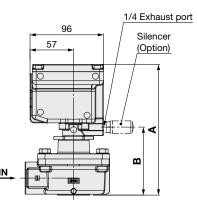

Dimensions [mm]				
Model	Port size	Α	В	
JSXFF-06	3/4	162	80	
JSXFF-10	1	171	89	
JSXFF-14	1 1/2	221	139	

The dimensions indicate the values after screw tightening.

JSXFH/Immersion type

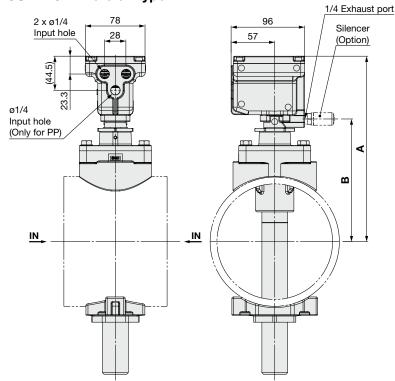


Dimensions				
Model	Port size	Α	В	
JSXFH4-06	3/4	213	131	
JSXFH5-06	3/4	227	145	
JSXFH5-10	-1	229	147	
JSXFH6-10		242	160	
JSXFH6-14	1 1/2	266	184	
JSXFH8-24	1 1/2	291	209	
JSXFH8-20	2	306	224	
JSXFH10-20		333	251	

The dimensions indicate the values after screw tightening.

With M12 Connector

Dimensions other than those shown below are the same as those of the SMARTVENT type.

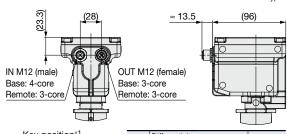

Key position*1
2 1
3 4

		Differential pr		
	no.	Without (2-core)	With (4-core)	color
ì	1	DC(+)	DC(+)	Brown
ţ	2	_	LINE(+)	White
<u></u>	3	DC(-)	DC(-)	Blue
	4	_	LINE(-)	Black

- *1 L connectors cannot be used as the key position is not always the same. Be sure to use a straight connector.
- * There are 4 cores regardless of whether or not there is a differential pressure sensor.
- Use as a reference when option VXF20-53-□ is selected.



Replacement Parts (SMARTVENT Type/JSXF)

		Replacement part number				
Port size	Model	Main valve assembly (Main valve + O-ring)	Sub-valve assembly (Sub-valve + O-ring)	Silencer ①	Silencer ②	
06	JSXF(E, F, H)□-06□-5P□B-(S)	JSXF-06B-KT	_	Rc, G thread: AN20-02		
10	JSXF(E, F, H)□-10□-5P□B-(S)	JSXF-10B-KT	_	NPT thread: AN20-N02	_	
14	JSXF(E, F)□-14□-5P□B-(S)	JSXF-14B-KT	JSXF-14B-KT2	Do C through ANION ON	Do C throad: ANOO OO	
14	JSXFH□-14□-5P□B-(S)	JSXF-14B-1-KT	JOAF-146-K12	Rc, G thread: AN20-02 NPT thread: AN20-N02	Rc, G thread: AN30-03 NPT thread: AN30-N03	
20	JSXFH□-20□-5P□B-(S)	JSXF-20B-KT	JSXF-14B-KT2	NFT tillead. ANZO-NOZ	NET tilleau. ANSO-NOS	

Disassembly/Assembly Procedure

⚠ Caution

1. Before disassembly, be sure to turn OFF the power supply and pressure supply, and then release the residual pressure.

Disassembly

1) Loosen the hexagon bolts, and remove the bonnet assembly (bonnet), O-ring, and the main valve (sub-valve).


Assembly

- 1) Attach the main valve (sub-valve) to the body. The main valve (sub-valve) has a predetermined mounting direction. Assemble the valve referring to Fig. 1.
 - If the valve is assembled incorrectly, it can cause a malfunction.
- 2) Mount the O-ring to the body groove. (See Fig. 2.) After mounting the O-ring, check to make sure that the O-ring is fitted properly into the groove. If it is not in the groove, external leakage and/or operation failure may occur.
- 3) Attach the bonnet assembly (bonnet) to the body.
- 4) Tighten the hexagon bolts (hexagon socket head cap screws) diagonally.


(See Table 1 for the tightening torque.)

Table 1. Proper Tightening Torque [N·m]

JSXF□-	06□	M8	12.5 to 13.8
JSXF□-	10□	M8	12.5 to 13.8
JSXF□-14□	Main valve	M6	5.2 to 5.7
JSAFU-14U	Sub-valve	M4	1.5 to 1.7
JSXF□-20□	Main valve	M8	12.5 to 13.8
JSAFLI-20LI	Sub-valve	M4	1.5 to 1.7

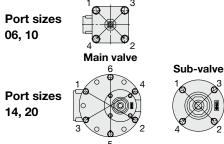

Port sizes 06, 10

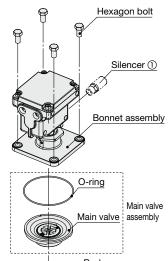




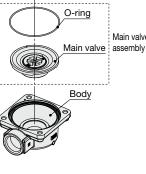


Fig. 2 O-ring position

Port sizes 14, 20

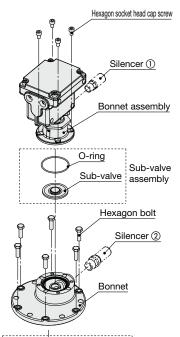

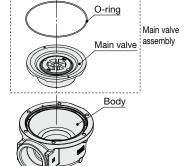


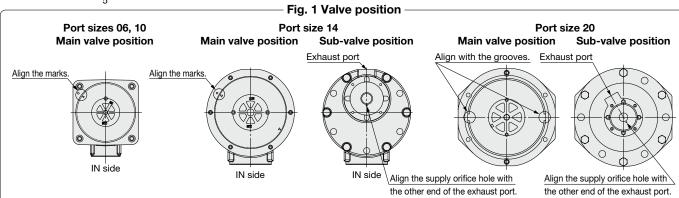

valve

JSXF-P□ Series
Option

The following options are available for wiring as shown below.

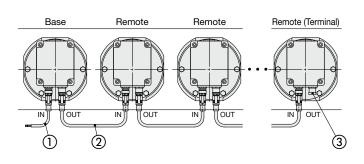

Cable Specifications

Key type		A-coded	
	Rated current	4 A	
	Rated voltage	250 V	
Rating/	Insulation resistance	100 mΩ	
Performance	Operating temperature range	−25 to 90°C	
	Protection class	IP67 (Only with screw tightened)	
	Durability	100 cycles	
	Material of knurl	Zinc die-cast, Brass, Nickel plated	
Material	Terminal	Cu, Sn, Gold plated	
	Housing	TPU	
	Cable jack	PVC	


① M12 connector cable (female 4-core) for power supply/differential pressure sensor and base valve "IN" connection

* Refer to the "With M12 Connector" section on page 22 for wiring.

Cable length


• Cable length				
Symbol	L cable length			
10	1 m			
30	3 m			
50	5 m			




 

2 M12 connector cable (male 4-core to female 4-core) for base/remote valve "OUT" and remote valve "IN" connection

  
VXF20-54-10






③ Remote valve plug (terminal)

  EX9 – AWTS (10 pcs.)





Pulse Valve For Dust Collector


Air Operated Type

JSXFA Series



Solenoid Valve Type ▶ p. 7 SMARTVENT Type ▶ p. 19

How to Order

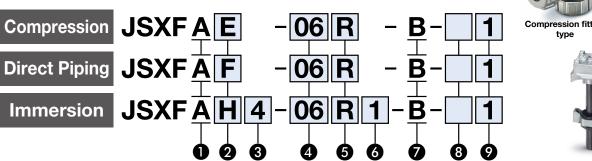



Valve type

Air operated

Pipina

E	Compression fitting type*1	
F	Direct piping type	
н	Immersion type*2	

- *1 Seals and washers are included.
- *2 The valve and pipe do not come assembled.

3 Tank size (JSXFAH only)

4	4 inch
5	5 inch
6	6 inch
8	8 inch
10	10 inch

5 Thread type

R	Rc
N	NPT
F	G

8 Silencer

(Only port size 14 and 20 can be selected.)

(Oilly P	iont size 14 and 20 can be selected
Nil	Without
S	With

Shipped together with the product Refer to "Replacement Parts" on page 35.

Pilot nort size

O	or port oizo
Nil	1/4
1	1/8

4 Port size*1

06	3/4 (20A)
10	1 (25A)
14	1 1/2 (40A)
20 *2	2 (50A)

- *1 For port size selection, refer to the "Variations for Port Size and Option" table below. *2 Port size 20 is only available
- for the JSXFAH.

6 OUT port piping configuration (JSXFAH only)

	~! ~! !	Oilly,	
Symbol	Length	G thread	Appearance
1	Short	None	2112
2	Long	None	
3	Short	Yes	G thread
4	Long	162	

7 Fluid and ambient temperatures

B −40 to 60°C



Tank hole dia.: ø76 p. 37 (Port size 14, 6-inch tank)


Pilot Valve Selection (JSXFA series common)

For the pilot valve orifice diameter, Ø5 mm or larger is recommended.

The product may not operate correctly if the pilot valve orifice diameter is inadequate. (Port size: 3/4, 1) Depending on the pilot piping port size*1 or length, the valve

may not operate correctly. *1 The I.D. of the pilot piping must be larger than the pilot valve

orifice diameter to use. The max. pilot piping I.D. is 10 mm.

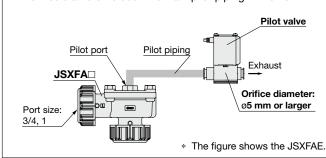

Made to Order

(JSXFA series common)

When the pilot valve orifice diameter is ø3 mm or larger and less than ø5 mm, put "A" to the end of the product number for made-to-order.

Pilot valve orifice diameter: Special specification

For ø3 mm to ø5 mm Port size: 06, 10 **JSXFA** Enter the standard product number.

Variations for Port Size and Option

Model	Tank size	Port size					
	iank size	06	10	14	20		
JSXFAE	_	•	•	•	_		
JSXFAF	_	•	•	•	_		
	4 inch	•	_	_	_		
	5 inch	•	•	_	_		
JSXFAH	6 inch	_	•	•	_		
	8 inch	_	_	•			
	10 inch	_	_	_			
Pilot valve orifice		•	•	_	_		
Silencer		_	_	•	•		

Pulse Valve Valve for Dust Collector Air Operated Type JSXFA Series

Symbol



JSXFAE Series



JSXFAF Series



JSXFAH Series

Specifications

Common Specifications

	Fluid		Air
	Min. operating pressure differential	[MPa]	0.1
Water-	Max. operating pressure differential	[MPa]	0.9
Valve specifications	Max. system pressure	[MPa]	0.9
Specifications	Fluid temperature	[°C]	-40*1 to 60
	Ambient temperature	[°C]	-40 to 60
	Operating environment		Indoor/Outdoor*2

- *1 No condensation
- *2 For outdoor use, be sure to implement sufficient measures to protect the operational pilot valve from rain water.

Refer to "2-Port Solenoid Valves for Fluid Control Precautions" for protective measures. **Be sure to read "Specific Product Precautions" before handling.**

Individual Specifications: Compression Fitting Type / Direct Piping Type

Series		JSXFAE/F					
		06	10	14			
Orifice diameter [mm]		ø32	ø40	ø50			
Port size		3/4	1	1 1/2			
Weight	Compression	470	910	1,850			
[g]	Direct piping	290	500	1,230			

Individual Specifications: Immersion Type

Series				JSXFAH						
			0	6	1	0	1	4	2	0
Orifice diameter [mm]		ø32 ø40		ø45		ø55				
Port size		3/4 1		1 1/2		2				
Tank size ANSI		4	5	5	6	6	8	8	10	
	Weight*3 Piping	1	1,110	1,120	1,730	1,790	2,710	2,830	4,420	4,590
Weight*3		2	1,140	1,160	1,780	1,890	2,870	3,060	4,740	4,900
[9]	configuration	3	1,110	1,120	1,730	1,790	2,710	2,830	4,420	4,590
		4	1,140	1,160	1,780	1,890	2,870	3,060	4,740	4,900


^{*3} The tank weight is not included in the weight above.



Construction

JSXFAE/Compression Fitting Type


Port sizes 06, 10

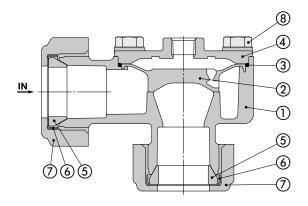

Component Parts

No. Description Material 1 Body ADC 2 Main valve Resin	
2 Main valve Resin	
3 O-ring NBR	
4 Bonnet ADC	
5 Seal NBR	
6 Washer Fe (Chromating)	
7 Compression nut ADC	
8 Hexagon bolt Stainless steel	

Port size 14

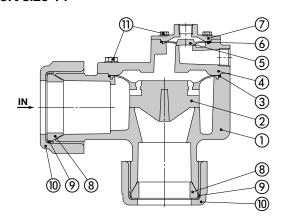

Component Parts


0011	iponent i a			
No.	Description	Material	No.	Description
1	Body	ADC	8	Seal
2	Main valve	Resin	9	Washer
3	O-ring	NBR	10	Compression n
4	Bonnet	ADC	11	Hexagon bolt
5	Sub-valve	Resin		
6	O-ring	NBR		
7	Bonnet	ADC		

Material **NBR**

Fe (Chromating) nut ADC Stainless steel

JSXFAF/Direct Piping Type


Port sizes 06, 10

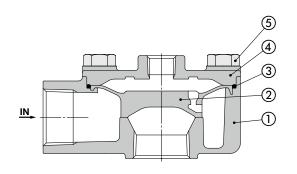

Component Parts

No.	Description	Material
1	Body	ADC
2	Main valve	Resin
3	O-ring	NBR
4	Bonnet	ADC
5	Hexagon bolt	Stainless steel

Port size 14

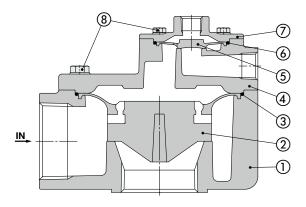

Component Parts


No.	Description	Material
1	Body	ADC
2	Main valve	Resin
3	O-ring	NBR
4	Bonnet	ADC
5	Sub-valve	Resin
6	O-ring	NBR
7	Bonnet	ADC
8	Hexagon bolt	Stainless steel

28

Construction

JSXFAH/Immersion Type

Port sizes 06, 10

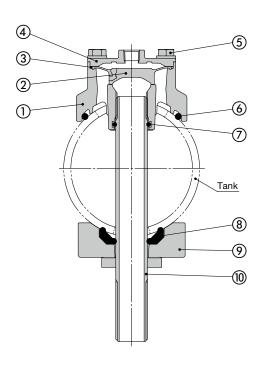


* The tank should be provided by the customer.

Component Parts

No.	Description	Material
1	Body	ADC
2	Main valve	Resin
3	O-ring	NBR
4	Bonnet	ADC
5	Hexagon bolt	Stainless steel
6	O-ring	NBR
7	O-ring	NBR
8	Gasket	NBR
9	Bottom support	ADC
10	Outlet pipe assembly	STKM + SS400

Port sizes 14, 20

Pulse Valve Valve for Dust Collector

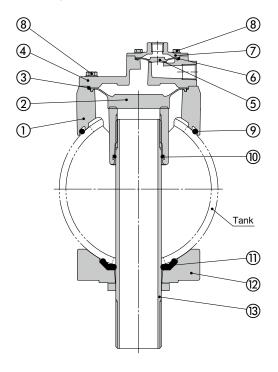

Air Operated Type

JSXFA Series

* The tank should be provided by the customer.

Component Parts

OUIIII	policiit i aits	
No.	Description	Material
1	Body	ADC
2	Main valve	Resin
3	O-ring	NBR
4	Bonnet	ADC
5	Sub-valve	Resin
6	O-ring	NBR
7	Bonnet	ADC
8	Hexagon bolt	Stainless steel
9	O-ring	NBR
10	O-ring	NBR
11	Gasket	NBR
12	Bottom support	ADC
13	Outlet pipe assembly	STKM + SS400



Dimensions: **JSXFAE**/Compression Fitting Type


Port size

Ē

) 111

(B)

(**C**)

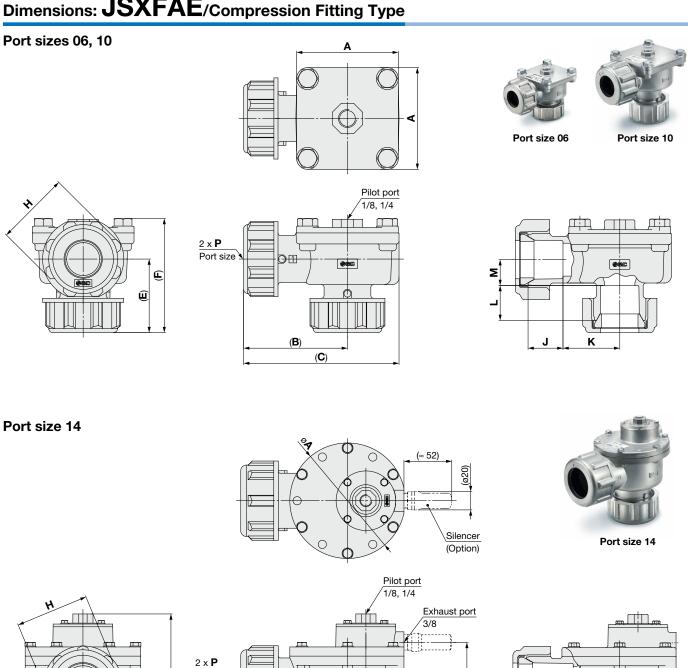


Dimensions												[mm]
Model	Port size P	Α	(B)	(C)	(E)	(F)	(G)	Н	J	K	L	М
JSXFAE-06	3/4	74	76	113	54	83	_	54	25.4	41.3	25.4	18.8
JSXFAE-10	1	94	90	137	82	120	_	65	33.3	44.4	38.1	31.6
JSXFAF-14	1 1/2	126	117	178	92	170	139	80	51.3	50.7	45	33

20

Œ

Dimensions: **JSXFAF**/Direct Piping Type

Port sizes 06, 10

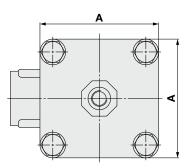








Port size 06

Port size 10

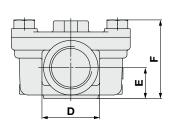

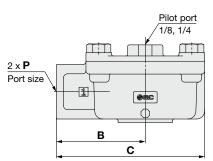



Port size 14

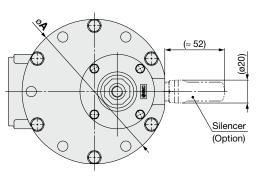



Port size 14

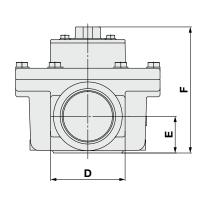


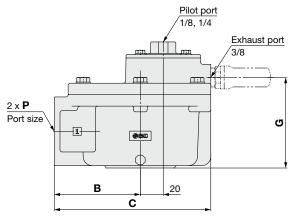

Dimensions [mm]													
Model	Port size P	A	В	С	D	E	F	G					
JSXFAF-06	3/4	74	55.5	92.5	36	19.3	48.8	_					
JSXFAF-10	1	94	63.5	110.5	44	22.2	60.2	_					
JSXFAF-14	1 1/2	126	75.1	136.6	65	32	110	79					




Port size 06

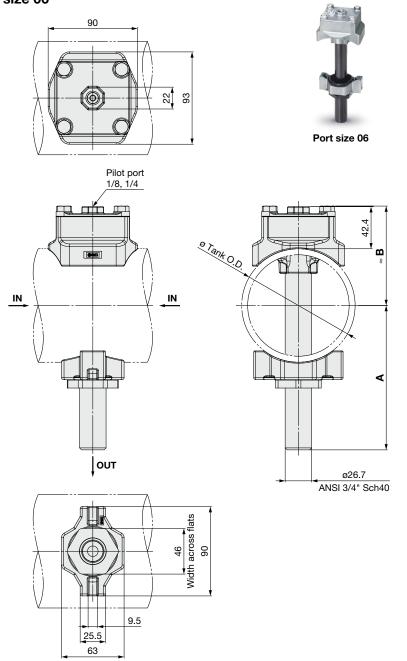


Recommended Tank Dimensions

* The tank should be provided by the customer.

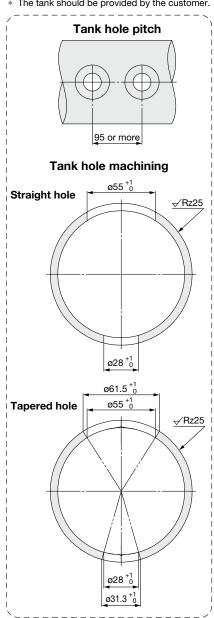

Dimensions	OUT p	UT port piping configuration												
Tank size	Tank O.D.	В	1			2			3			4		
TallK SIZE	Ø		Α	D	E	Α	D	E	Α	D	E	Α	D	E
4 inch (ANSI 4")	114.3 +1.6	100	146 ±5		62	164 ±5		80	146 ±5	50	62	164 ±5	70	80
5 inch (ANSI 5")	141.3 +1.6 -0.8	114	153 ±5	_	56	173 ±5	_	76	153 ±5	50	56	173 ±5	70	76
							ш		G3	/4" thread			4" thread	



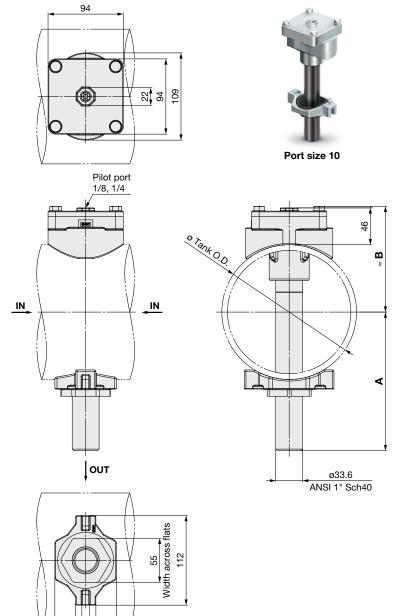


9.5


25.5


Recommended Tank Dimensions

* The tank should be provided by the customer.

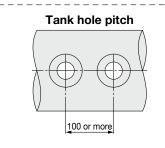


Tank hole machining

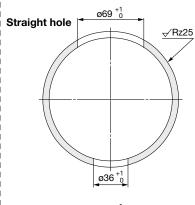

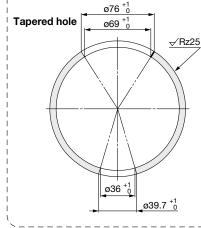

Dimensions			OUT port piping configuration												
Tank size	Tank O.D.	В	1				2			3			4		
Tarik Size	Ø		Α	D	E	Α	D	E	Α	D	E	Α	D	E	
5 inch (ANSI 5")	141.3 +1.6 -0.8	118	153 ±5		61	173 ±5		81	153 ±5	50	61	173 ±5	70	81	
6 inch (ANSI 6")	168.3 +1.6 -0.8	132	173 ±5	_	68	213 ±5		108	173 ±5	50	68	213 ±5	90	108	

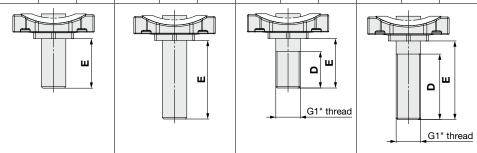

Solenoid Valve Type

JSXF


Air Operated Type
JSXFA

Working Principle

Made to Order


56-JSXF 55-JSXFA



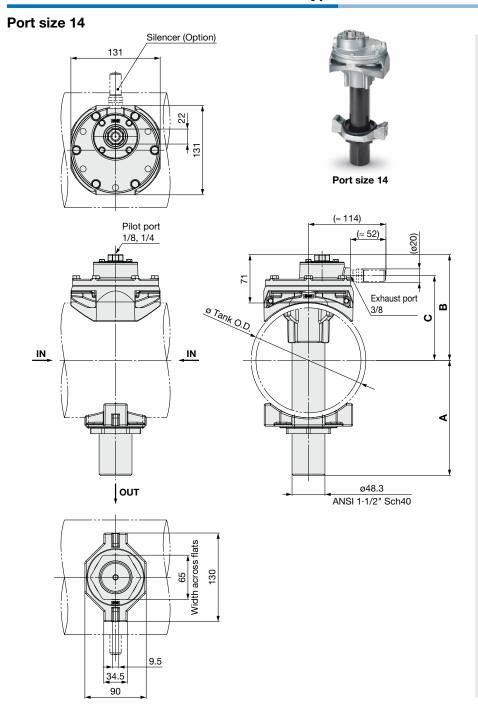

Recommended Tank Dimensions * The tank should be provided by the customer. Tank hole pitch 135 or more Tank hole machining Straight hole <u>√Rz</u>25 ø52 ⁺¹₀ Tapered hole ø95 ⁺¹₀ √Rz25 ø52 ⁺¹0 ø56.8 ⁺¹

Dimensions								OUT p	ort pipin	g configura	ation				
Tank size	Tank O.D.	В	С	1 2				3		4					
Talik Size	Ø		•	Α	D	E	Α	D	E	Α	D	E	Α	D	E
6 inch (ANSI 6")	168.3 +1.6 -0.8	155	124	169 ±5		61	209 ±5		101	169 ±5	50	61	209 ±5	90	101
8 inch (ANSI 8")	219.1 +1.6 -0.8	181	150	198 ±5	_	65	258 ±5	_	125	198 ±5	50	65	258 ±5	110	125
											G1	·1/2 thread	•	G1	u 1/2 thread

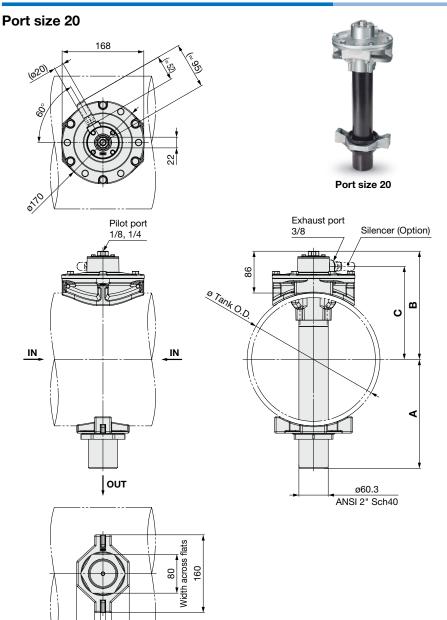


9.5

34.5

108

Recommended Tank Dimensions

The tank should be provided by the customer.

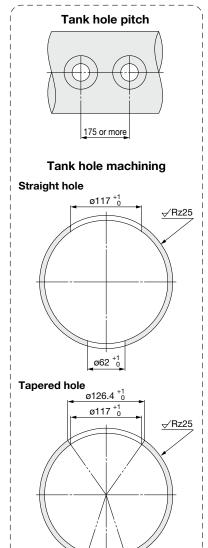

ø62 ⁺¹

Dimensions								OUT p	ort pipin	g configur	ation				
Tank size	Tank O.D.	В	С		1 2				3			4			
Tallk Size	Ø			Α	D	E	Α	D	E	Α	D	E	Α	D	E
8 inch (ANSI 8")	219.1 +1.6 -0.8	196	165	197 ±5		60	257 ±5		120	197 ±5	50	60	257 ±5	110	120
10 inch (ANSI 10")	273.1 +2.4 -0.8	223	192	224 ±5	_	60	284 ±5	_	120	224 ±5	50	60	284 ±5	110	120
											G	2" thread		Gi	w 2" thread

SMC

Dracaution

Solenoid Valve Type

JSXF

SMARTVENT Type

Air Operated Type JSXFA

Working Made to Order Principle

56-JSXF 55-JSXFA

Pilot Valve Enclosure

Dedicated Controller for Operation

ns e

dlossary of Terms



Replacement Parts (Air Operated Type/JSXFA)

			Replacement part number	
Port size	Model	Main valve assembly	Sub-valve assembly	Silencer
		(Main valve + O-ring)	(Sub-valve + O-ring)	Silericei
06	JSXFA(E, F, H)□-06□-B-□	JSXF-06B-KT	_	_
06	JSXFA(E, F, H)□-06□-B-□A	JSXF-06B-A-KT	_	_
10	JSXFA(E, F, H)□-10□-B-□	JSXF-10B-KT	_	_
10	JSXFA(E, F, H)□-10□-B-□A	JSXF-10B-A-KT	_	_
14	JSXFA(E, F)□-14□-B-(S)□	JSXF-14B-KT	JSXF-14B-KT2	Do C through ANION ON
14	JSXFAH□-14□-B-(S)□	JSXF-14B-1-KT	JSAF-14B-K12	Rc, G thread: AN30-03 NPT thread: AN30-N03
20	JSXFAH□-20□-B-(S)□	JSXF-20B-KT	JSXF-14B-KT2	NET UITEAU. ANSU-NUS

Disassembly/Assembly Procedure

⚠ Caution

1. Before disassembly, be sure to turn OFF the power supply and pressure supply, and then release the residual pressure.

Disassembly


1) Loosen the hexagon bolts, and remove the bonnet, O-ring, and the main valve (sub-valve).


Assembly


- 1) Attach the main valve (sub-valve) to the body. The main valve (sub-valve) has a predetermined mounting direction. **Assemble the valve referring to Fig. 1.**
 - If the valve is assembled incorrectly, it can cause a malfunction.
- 2) Mount the O-ring to the body groove. (See Fig. 2.) After mounting the O-ring, check to make sure that the O-ring is fitted properly into the groove. If it is not in the groove, external leakage and/or operation failure may occur.
- 3) Attach the bonnet to the body.
- 4) Tighten the hexagon bolts diagonally. (See Table 1 for the tightening torque.)


Table 1. Proper Tightening Torque $[N \cdot m]$

JSXFA□-06□		M8	12.5 to 13.8
JSXFA□-10□		M8	12.5 to 13.8
JSXFA□-14□	Main valve	M6	5.2 to 5.7
	Sub-valve	M4	1.5 to 1.7
JSXFA□-20□	Main valve	M8	12.5 to 13.8
	Sub-valve	M4	1.5 to 1.7

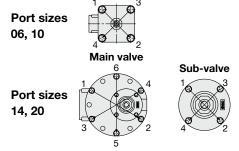


 

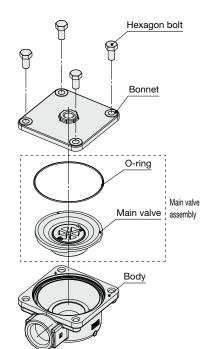

 

Port sizes 14, 20

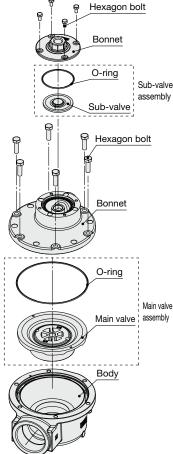



IN side

Port sizes 06, 10 Port size 14 Port size 20 Main valve position Main valve position Main valve position Sub-valve position Sub-valve position Align with the grooves. Exhaust port Exhaust port Align the marks Align the marks IN side Align the supply orifice hole with Align the supply orifice hole with the other end of the exhaust port. the other end of the exhaust port.


JSXF/JSXFA Series Working Principle

Pilot valve

Port Sizes 06, 10




The air enters from the IN side goes through the supply orifice of the main valve to fill the pressure action chamber. The main valve is closed by the pressure built in the pressure action chamber.

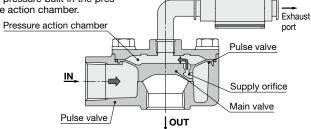


Right after energized

When the pilot valve is energized, the armature opens, and the air filling the pressure action chamber is released to the atmosphere through the pilot valve.

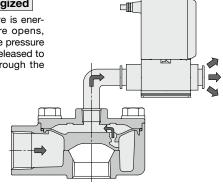

Energized (Main valve open)


Due to the release of air from the pilot valve to atmosphere, the pressure in the pressure action chamber decreases (force pushing the main valve down < force pushing the main valve up), opening the main valve. Because of this, the air flows to the OUT side.

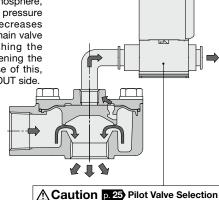

Port Sizes 14, 20

De-energized


The air enters from the IN side goes through the supply orifice of the main valve and sub-valve to fill the pressure action chamber. The main valve and sub-valve are closed by the pressure built in the pressure action chamber.

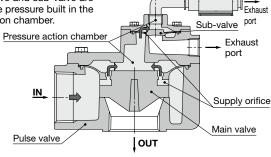

Pilot valve


Right after energized

When the pilot valve is energized, the armature opens, and the air filling the pressure action chamber ① is released to the atmosphere through the pilot valve.

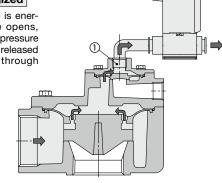

Energized (Sub-valve open)


Due to the release of air from the pilot valve to atmosphere, the pressure in the sub-valve pressure action chamber ① decreases (force pushing the sub-valve down < force pushing the sub-valve up), opening the sub-valve. Because of this, the air filling the pressure action chamber ② is released to the atmosphere from the exhaust port.

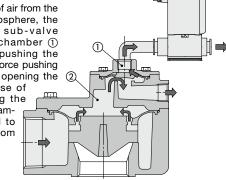

Energized (Main valve open)

Due to the release of air from the pressure action chamber ②, the pressure in the pressure action chamber ② decreases (force pushing the main valve down < force pushing the main valve up), opening the main valve. Because of this, the air flows to the OUT side of the pulse valve.

SMC

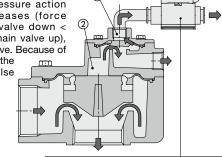

⚠ Caution p. 25 Pilot Valve Selection

Immersion Type JSXF/JSXFA Series **Made to Order**



For details, refer to 6 below.

1 Tank Hole Diameter: ø76





Air operated type


Solenoid valve type

How to Order

Solenoid Valve Type

SMARTVENT Type

Air Operated Type

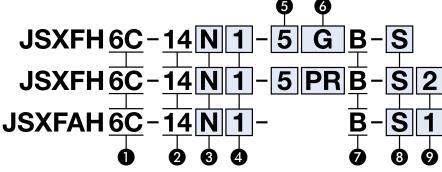

Valve type

6C	6 inch
	Tank hole dia, ø76

5 Rated voltage

Symbol	Rated voltage
1	100 VAC
2	200 VAC
3	120 VAC (110 VAC)
4	220 VAC
7	240 VAC
J	230 VAC

DC

Symbol	Rated voltage
5	24 VDC

Fluid and ambient temperatures

_	_	<u> </u>			
B	1		-40 t	ი 60°C	

Silencer

Nil	Without
S	With

9 Pilot port size (Air operated type)

47 til	opolatou typo,
Nil	1/4
1	1/8

Electrical entry (SMARTVENT type)

		71: -7
	Nil	IN side
	2	180° Inverted

It can be changed by the customer. For details, refer to page 54.

The specifications and replacement parts are the same as those of the standard model.

Refer to pages 8 and 15 for the solenoid valve type, pages 20 and 23 for the SMARTVENT type, and pages 26 and 35 for the air operated type. Add 140 g to the weight of each.

2 Port size 1 1/2 (40A)

3 Thread type				
R	Rc			
N	NPT			
F	G			

	4	OUT	port	piping	configuration
--	---	-----	------	--------	---------------


1	Short	Without
2	Long	vvitriout
3	Short	With
4	Long	VVILII

6 Rated voltage (Solenoid valve type) Electric control (SMARTVENT type)

Sy	mbol	Rated voltage/Elect	tric control	CE/UKCA- compliant	Туре	Symbol	Rated voltage/Elect	ric control	CE/UKCA- compliant	Type
	G	Grommet*1		24 VDC		WN	M12 connector*2 (With surge voltage suppressor)		All voltages	Solenoid valve
(GS	Grommet with PCB (With surge voltage suppressor)		100 VAC 24 VDC		*3 PP	Base, 3 holes*1		24 VDC	
(cs	Conduit (With surge voltage suppressor)		All voltages	Solenoid	РВ	Base, 2 holes*1		24 VDC	
ı	os	DIN terminal (With surge voltage suppressor)		All voltages	valve	PR	Remote, 2 holes*1		24 VDC	SMARTVENT
ı	ΟZ	DIN terminal with light (With surge voltage suppressor)		All voltages		*3, *4 PBW	Base/M12 connector, 2 holes		24 VDC	
[ON	DIN terminal without connector (With surge voltage suppressor)		All voltages		PRW	Remote/ M12 connector, 2 holes		24 VDC	

- *1 Only 24 VDC can be selected for the rated voltage.
- *2 A cable for the M12 connector is not included with the product. Refer to "Option" on page 17 to order it separately.
- *3 When using a differential pressure sensor (provided by the customer), select PP or PBW for the base valve. For base valves with an M12 connector, select PBW regardless of whether or not there is a differential pressure sensor. Either can be used. Use a 2-wire type 4 to 20 mA specification differential pressure sensor.
- *4 Use a straight wiring cable.

Recommended Tank Dimensions * The tank should be provided by the customer.

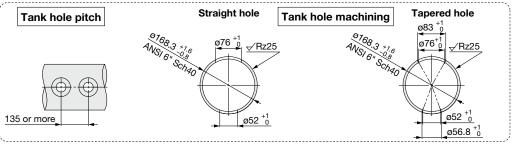



Solenoid Valve Type

Dimensions other than those shown below are the same as those of the air operated type.


Silencer (Option)

G: Grommet

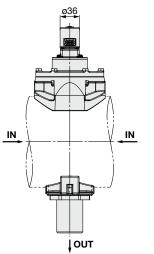


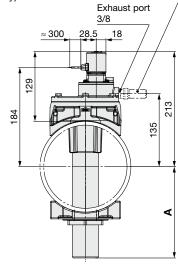

GS: Grommet with PCB

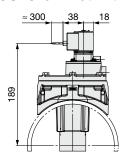



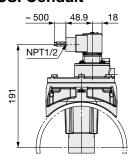


SMARTVENT Type


90

9.5 34.5


Dimensions other than those shown below are the same as those of the air operated type.

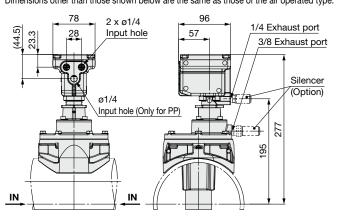


DS: DIN terminal DZ: DIN terminal with light

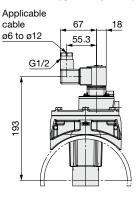


DN: Without DIN connector

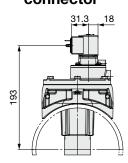

WN: M12 connector

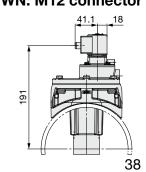

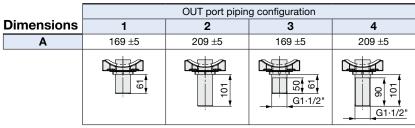

SMC

Solenoid Valve Type **JSXF**

SMARTVENT Type □SXF-P□

Air Operated Type **JSXFA**

Made to Order 56-JSXF 55-JSXFA

Pilot Valve Enclosure

Dedicated Controller for Operation

Bulkhead Fitting

 
Glossary of Terms

Specific Product Precautions

ATEX Compliant Pulse Valve for Dust Collector

Solenoid Valve Type

SXF Series












How to Order

Compression fitting type

Direct piping type

Immersion type

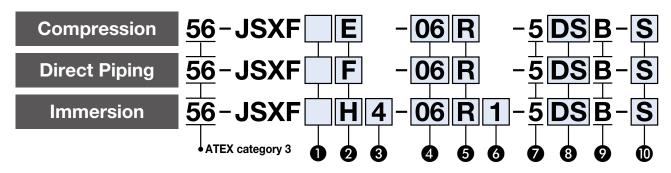

Valve type

Nil	Solenoid valve	1 2 (IN) (OUT)
-----	----------------	-------------------

3 Tank size (JSXFH only)

4	4 inch	
5	5 inch	
6	6 inch	
6C	6 inch (ø76 hole)	
8	8 inch	
10	10 inch	

4 Port size*1

06	3/4 (20A)		
10	1 (25A)		
14	1 1/2 (40A)		
20 *2	2 (50A)		

- *1 For port size selection, refer to the "Variations for Port Size and Option" table below.
- *2 Port size 20 is only available for the JSXFH.

2 Piping Ground terminal*3 Compression Ε fitting type*1 Yes F Direct piping type Н Immersion type*2

5 Thread type

Rated voltage

Symbol	Rated voltage
5	24 VDC

6 OUT port piping configuration (JSXFH only)

Symbol	Length	G thread	Appearance		
1	Short	None	2112		
2	Long	none			
3	Short	Yes	the difference of thread		
4	Long	162			


- *1 Seals and washers are included.
- *2 The valve and pipe do not come assembled.
- *3 A ground terminal is included.

8 Electrical entry

<u> </u>			
Symbol	Electrical entry		
DS	DIN terminal (With surge voltage suppressor)		
DN	DIN terminal without connector (With surge voltage suppressor)		

* When selecting "DN," be sure to use it with an ATEX-certified nass magnet DIN connector (EVS7060-61).

DIN connector dimensions

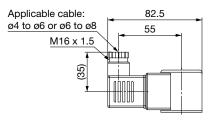

Dimensions other than those shown above are the same as those of the standard type. Refer to pages 11 to 14.

9 Fluid and ambient temperatures

–20 to 60°C В

Silencer

O		
Nil	Without	
S	With	
Shipped together with the		

Shipped together with the product

The replacement parts are the same as those for the standard solenoid valve type.

Refer to page 15 for details.

The solenoid coil cannot be replaced.

 
Specifications

⚠ Caution

Ground terminal (56-)

Be sure to connect the included ground terminal to the hexagon bolt.

- * Connect at the point indicated by the grounding symbol.
- Refer to page 16 for the tightening torque.
- Be sure to periodically inspect the hexagon bolt for loosening, and tighten it as necessary.
- * A wire with a conductor cross section of 4 to 6.64 mm² is recommended for wiring.



Ground terminal mounting position
Port size 20
Port size 06 Port size 10
Grounding symbol
Grounding symbol
Grounding symbol
Grounding symbol

Common Specifications

	Valve construction		Pilot operated diaphragm
	Valve type		Normally closed (N.C.)
	Fluid		Air
	Withstand pressure	[MPa]	1.5
Valve	Min. operating pressure differential	[MPa]	0.1
specifications	Max. operating pressure differential	[MPa]	0.9
	Max. system pressure	[MPa]	0.9
	Fluid temperature	[°C]	-20*1 to 60
	Ambient temperature	[°C]	-20 to 60
	Enclosure		IP65*2
Coil	Allowable voltage fluctuation		±10% of the rated voltage
specifications	Allowable leakage voltage		2% or less of the rated voltage
specifications	Power consumption*3	[W]	12
. d. Nie e e e e eleve			

- *1 No condensation
- *2 If water enters the product, it may result in operation failure or breakage.

Therefore, take appropriate measures to prevent water from entering the product when used in an environment where it is constantly exposed to water.

*3 Power consumption/Apparent power: The value at an ambient temperature of 20°C and when the rated voltage is applied (Variation: ±10%)

Be sure to read "Specific Product Precautions" before handling.

Variations for Port Size and Option

		•			
Model	Tank size	Port size			
Model		06	10	14	20
56-JSXFE	_	•	•	•	_
56-JSXFF	_	•	•	•	_
	4 inch	•	_	_	_
	5 inch	•	•	_	_
56-JSXFH	6 inch	_	•	•	_
30-J3AFH	6 inch (ø76)	_	_	•	_
	8 inch	_	_	•	•
	10 inch	_	_	_	•
Sile	Silencer		•	•	•
Choricol					

ATEX Compliant Pulse Valve for Dust Collector

Air Operated Type

SXFA Series

How to Order











Compression fitting type

Direct piping Immersion type type

Compression

Direct Piping

Immersion

<u>55</u> -JSXF[AE	-06 R	- <u>B</u> -	
<u>55</u> -JSXF	AF	-06 R	- <u>₿</u> -	
<u>55</u> -JSXF	AH4	-06R1]- <u>B</u> -	
ATEX category 2	0 9 3	4 6 6	0	8 9

Valve type

A	Air operated	1 2 (IN) (OUT)

3 Tank size (JSXFAH only)

4	4 inch		
5	5 inch		
6	6 inch		
6C	6 inch (ø76 hole)		
8	8 inch		
10	10 inch		

4 Port size*1

06	3/4 (20A)
10	1 (25A)
14	1 1/2 (40A)
20 *2	2 (50A)

- *1 For port size selection, refer to the "Variations for Port Size and Option" table below.
- *2 Port size 20 is only available for the JSXFH.

Piping

	G i ipilig				
E	Compression fitting type*1				
F	Direct piping type				
Н	Immersion type*2				
*1 Cools and washers are included					

*1 Seals and washers are included.

Enter the standard product number.

*2 The valve and pipe do not come assembled.

6 Thread type

R	Rc
N	NPT
F	G

7 Fluid and ambient temperatures

B	−40 to 60°C

Silencer

	10)	ıly	port	size	14 ar	nd 20) can	be	selec	ted.	
							-				•

(Only port size 14 and 20 can be selected.)				
Nil	Without			
S With				

Shipped together with the product

6 OUT port piping configuration (JSXFAH only)

	(OOM ATTOMY)					
Symbol	Length	G thread	Appearance			
1	Short	None				
2	Long	None				
3	Short	Yes	G thread			
4	Long	res				

Pilot port size

	•
Nil	1/4
1	1/8

Made to Order Pilot valve orifice diameter: Special specification For ø3 mm to ø5 mm Port size: 06, 10 55-JSXFA -B-

Variations for Port Size and Option

Model	Tank size	Port size			
iviodei	Tarik Size	06	10	14	20
55-JSXFAE	_	•	•	•	_
55-JSXFAF	-	•	•	•	_
	4 inch	•	_	_	_
	5 inch	•	•	_	_
55-JSXFAH	6 inch	_	•	•	_
33-JSAFAH	6 inch (ø76)	_	_	•	_
	8 inch	_	_	•	•
	10 inch	_	_	_	•
Pilot v	Pilot valve orifice		•	_	_
Si	Silencer		_	•	•

The specifications, dimensions, replacement parts, and pilot valve selection are the same as those of the standard product. Refer to pages 25 to 35 for details.

 
Pilot Valve Enclosure

JSXFM Series





How to Order





Number of enclosure stations

Symbol	Symbol Stations	
06	6 stations	
08	8 stations	

2 Number of mounted valves

Symbol	6 stations	8 stations
01	1 pc.	1 pc.
02	2 pcs.	2 pcs.
03	3 pcs.	3 pcs.
04	4 pcs.	4 pcs.
05	5 pcs.	5 pcs.
06	6 pcs.	6 pcs.
07	_	7 pcs.
08	_	8 pcs.

^{*} For details on mounted valves, refer to Fig. 1.

3 Rated voltage

Symbol	Rated voltage*1	CE/UKCA-compliant
1	100 VAC	_
2	200 VAC	_
3	120 VAC (110 VAC)	_
4	220 VAC	_
5	24 VDC	•
7	240 VAC	_
J	230 VAC	_

*1 Combinations of multiple voltages cannot be used.

4 Thread type

	ol IN port 1/8	Conduit port		
Symbol		6 stations 1/2 (1 hole)	8 stations 3/4 (2 holes)	
R	Rc	NPT		
N	NPT	NPT		
F	G	G		

5 Option

Symbol	Description		
Nil	None	_	
A	Lid catch mechanism		
В	Bracket		
АВ	Lid catch mechanism + Bracket		

D side 1 2 3 4 5 6 U side OUT port Conduit port Fig.1

<Ordering Example>

Product part no.: JSXFM06-03-5-N

Stations 1 to $3\cdot\cdot\cdot 3$ valves (24 VDC/NPT thread) Stations 4 to $6\cdot\cdot\cdot 3$ blanking plug assemblies


- *1 For the mounted valve arrangement, the valve closest to the D side is considered the 1st station.
- *2 For all stations where a valve is not mounted, blanking plug assemblies will be installed.

Specifications

		Enclosure	Aluminum die-cast	
Enclosure	Material	Seal	NBR	
		Bracket	Stainless steel	
specifications	Degree of protection		IP66, NEMA4	
	Standards		CE/UKCA*1	
	Valve construction		Direct operated poppet	
	Valve type		Normally closed (N.C.)	
	Fluid		Air	
	Orifice diameter	[mmø]	5	
Valve	Max. operating pressure differential	[MPa]	0.9	
specifications	Max. system pressure	[MPa]	0.9	
	Fluid temperature	[°C]	-10 to 60 (No freezing)	
	Ambient temperature	[°C]	–20 to 60	
	Valve leakage	Internal	1 cm ³ /min or less	
		External	1 cm ³ /min or less	
	Rated voltage [V]	AC	100, 120 (110), 200, 220, 230, 240	
	Rated voltage [V]		24	
	Allowable voltage fluctuation		±10% of rated voltage	
Coil	Allowable leakage voltage	AC	±5% of rated voltage	
specifications	Allowable leakage voltage	DC	±2% of rated voltage	
	Coil insulation type		Class B	
	Power consumption*2, *3	AC	15 VA	
	1 ower consumption	DC	18 W	
	Enclosure	6 stations	1418	
	Liciosure	8 stations	1823	
	Valve	AC	365	
Weight [g]	Taive	DC	353	
Weight [9]	Blanking plug		33	
	Lid catch bracket		52	
	Mounting bracket	6 stations	365	
	Modifility blacket	8 stations	471	

- *1 Only applicable to the 24 VDC rated voltage type
 *2 The maximum power consumption is equal to the power consumption of the valve multiplied by the number of stations. The recommended number of units in simultaneous operation is two. The table shows values for
- *3 Power consumption: The value at ambient temperature of 20°C and when the rated voltage is applied. (Variation: ±10%)

Construction

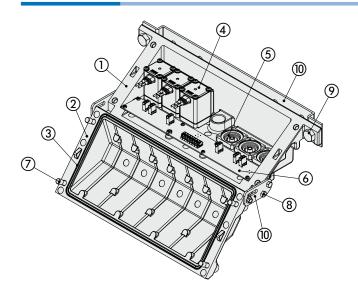


Component Parts

• • • • • • • • • • • • • • • • • • • •				
No.	Description	Material		
1	Enclosure	ADC		
2	Enclosure lid	ADC		
3	Gasket	NBR		
4	Solenoid valve	_		
5	Blanking plug assembly	ADC		
6	Board assembly	_		
7	Fall prevention screw	Stainless steel		
8	Hexagon bolt	Stainless steel		
9	Hexagon socket head cap screw	Stainless steel		
10	Bracket	Stainless steel		

JSXFM Series


Dimensions **JSXFM**

6 stations

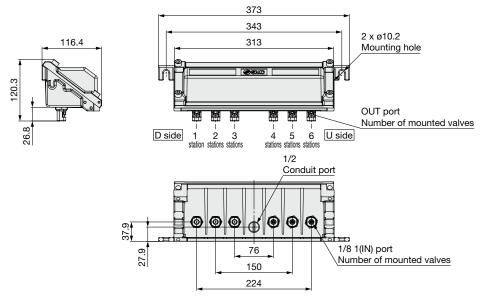


Bracket mounting dimensions

Allow enough space for the lid catch mechanism to open and close when using. For a detail drawing, refer to page 46.

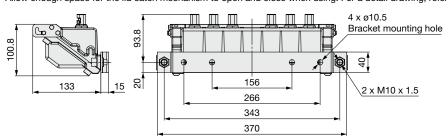


8 stations

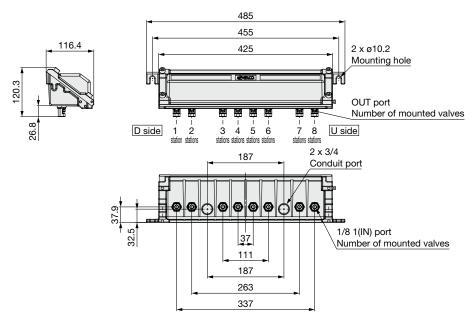

Bracket mounting dimensions

Allow enough space for the lid catch mechanism to open and close when using. For a detail drawing, refer to page 46.

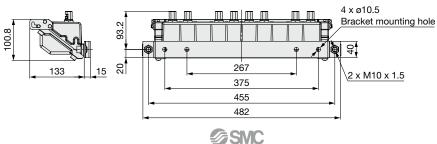


Bracket Mounting

Allow for the space provided in the dimensions below when mounting the bracket.

Opening and closing

- 1) Loosen the fall prevention screw and remove it from the enclosure.
- 2) Rotate the enclosure lid towards you while opening.
- 3) Follow this procedure in reverse to close the lid. For details on the tightening torque for the fall prevention screw, refer to the

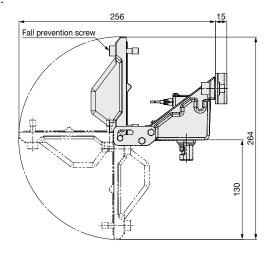

Replacement Parts (Pilot Enclosure/JSXFM)

Description	Replacement part no.	
	VX220ZA□X387	24 VDC
	VX220ZB□X387	100 VAC
Solenoid valve*1	VX220ZC□X387	120 VAC (110 VAC)
Soleriold valve	VX220ZD□X387	200 VAC
	VX220ZZ1B□X387	220 VAC (230 VAC)
	VX220ZZ1C□X387	240 VAC
Blanking plug assembly	y VXF20-60A	

*1 The □ in the part number indicates the following thread types. **Nil**: Rc thread, **A**: G thread, **B**: NPT thread

Disassembly/Assembly Procedures

⚠ Caution

 
Before starting the disassembly work, be sure to shut off the power supply and pressure supply, and then release the residual pressure.

Disassembly

- 1) Loosen the fall prevention screw and remove it from the enclosure.
- 2) Open the enclosure lid.
- 3) Remove the electrical connector from the board.
- 4) Remove the hexagon nut.
- 5) Remove the solenoid valve, blanking plug assembly, and gasket.

Assembly


- 1) Attach the gasket to the solenoid valve and blanking plug assembly.
- 2) Insert the solenoid valve and blanking plug into the hole at the base of the unit.
- 3) Fix the solenoid valve into place using the hexagon nut.
- 4) Wire the electrical connector to the board.
- 5) Close the enclosure lid.
- 6) Tighten the fall prevention screws diagonally to secure the lid in place.



Proper Tightening Torque

roper rigiterining	orque	[14 111]
Description	Size	Proper tightening torque
Fall prevention screw	M8	5.6 to 6.8
Hoyagan nut	Width coross flats 22	5.4 to 6.6



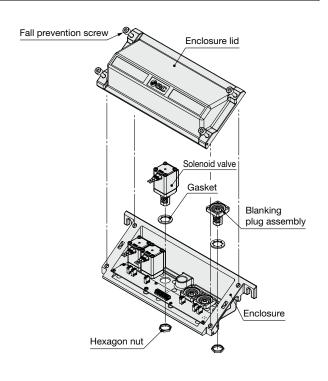

Dedicated Controller for Operation (

VXFC Series







VXFC 06 D

Number of output points 6 output points

Voltage
 D 24 to 48 VDC
 D-6 12 VDC
 A*1 85 to 240 VAC


*1 "A" is not a CE/UKCA marked product.

Specifications

10 output points

Model		VXFC ₁₀ 6A	VXFC ₁₀ D	VXFC ₁₀ ⁰⁶ D-6		
Input voltage		85 to 240 VAC	24 to 48 VDC	12 VDC		
Output voltage		Same as input voltage				
_	ON		0.01 to 0.99 s			
Time setting	OFF		0 to 299 s			
Setting	Time accuracy	±2%				
Number of outputs		6 to 10 points				
Operating ambient temperature		0 to 50°C (No condensation)				
Operating ambient humidity		45 to 8	0% (No conden	sation)		
Output current		0.5 A or less	0.5 A or less	0.5 A or less		
Power supply fuse		3 A	1 A	1 A		

[Application example]

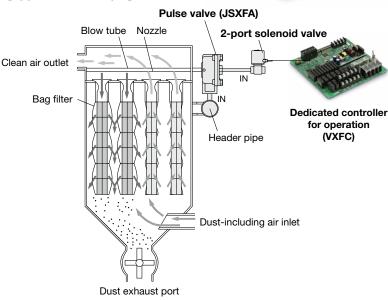


Two-time Hitting Function

A two-time hitting function has been adopted to improve the bag filter dusting efficiency. Turn ON the DIP switch for two-time hitting (OFF for one-time hitting).

(Effective for up to the number of set channels)

Operation sequence diagram


 $For \left\{ \begin{array}{l} \text{4 output points} \\ \text{Two-time hitting only for CH2} \\ \text{ON for 1 s} \\ \text{OFF for 2 s} \end{array} \right.$

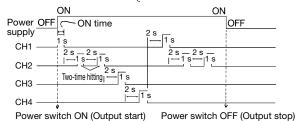

Interrupt Operation Function

Interrupting an operation via an external switch is possible using input signals.


■ Operation sequence diagram

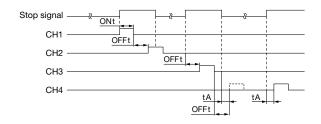


Cascade Connection (Multiple-board connection)

VXFC10: One board only allows 10 output points max., but the points can be increased to 20 or 30 output points by connecting cascades.

■ Connection

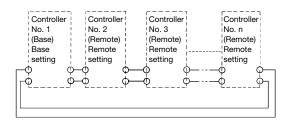


■ Operation sequence diagram

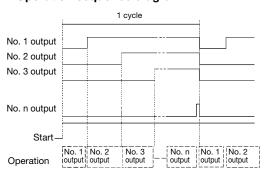




Dimensions

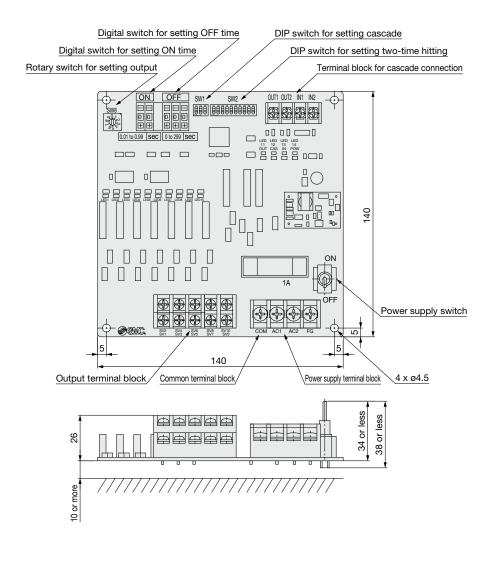

Bulkhead Fitting JSXFN Series

 How to Order



Piping

D	Double	
s	Single	

2 Port size

ı	00	0/4/004)
	06	3/4 (20A)
	10	1 (25A)
	-	, ,
	14	1 1/2 (40A)

3 Fluid and ambient temperatures

В	−40 to 60°C


Specifications


Port size		3/4" (20A)	1" (25A)	1 1/2" (40A)
Max. operating	g pressure [MPa]		0.9	
Withstand pre	essure [MPa]		1.5	
Ambient temperature [°C]		-40*1 to 60		
Max. plate thickness [mm]			8	
Mounting hole diameter [mmø]		42 to 51	54 to 62	69 to 78
Waight [g	Double	400	650	940
Weight [g	Single	260	450	640

^{*1} No condensation

Be sure to read "Specific Product Precautions" before handling.

Construction

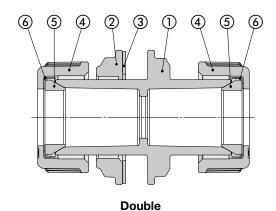

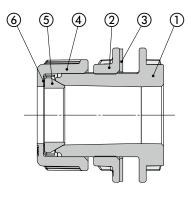


Single


Component Parts

	<u>• </u>	
No.	Description	Material
1 Bulkhead fitting		ADC
2	Bulkhead nut	ADC
3	Gasket	Aramid, etc.
4	Compression nut	ADC
5	Seal	NBR
6	Washer	Steel

Dimensions

Double

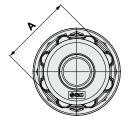

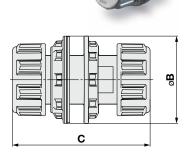

Single



	98
C	

Dimensions

Dimensions [mm]				
Model	Port size P	Α	ø B	С
JSXFN-D06	3/4	54	66	104
JSXFN-D10	1	65	79	112
JSXFN-D14	1 1/2	80	93	122.6

* The C dimensions show the dimensions after tightening.


Dimensions

				[11111]
Model	Port size	A	ø B	С

Model	Port size P	A	øΒ	С
JSXFN-S06	3/4	54	66	63
JSXFN-S10	1	65	79	73
JSXFN-S14	1 1/2	80	93	79


* The C dimensions show the dimensions after tightening.

Installation Dimensions

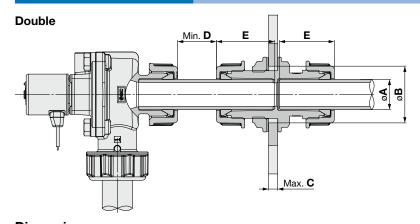

* Ensure sufficient space for maintenance and inspection.

Dimension	S				[mm]
Model	Pipe dia.	Mounting hole dia.	Max. plate thickness	Min. spacing	Pipe screw-in depth
Model	ø A	ø B	С	D	E
JSXFN-D06	3/4"	42 to 51		30	50
JSXFN-D10	1"	54 to 62	8	40	53.5
JSXFN-D14	1 1/2"	69 to 78		46	59.2

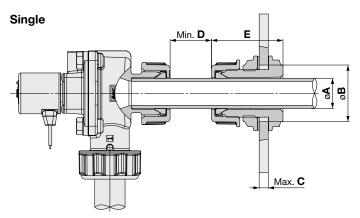

Dimension	Dimensions [mm]				
Model	Pipe dia. ø A	Mounting hole dia. ø B	Max. plate thickness C	Min. spacing D	Pipe screw-in depth
JSXFN-S06	3/4"	42 to 51		30	63
JSXFN-S10	1"	54 to 62	8	40	73
JSXFN-S14	1 1/2"	69 to 78		46	79



JSXF/JSXFA Series Glossary of Terms

Pressure Terminology

1. Max. operating pressure differential

The max. pressure differential (the difference between the inlet and outlet pressure) which is allowed for operation. When the outlet pressure is 0 MPa, this becomes the max. operating pressure.

2. Min. operating pressure differential

The min. pressure differential (the difference between the inlet pressure and outlet pressure) required to keep the main valve fully open.

3. Max. system pressure

The max. pressure that can be applied inside the pipelines (line pressure).

[The pressure differential of the solenoid valve portion must not exceed the max. operating pressure differential.]

4. Withstand pressure

The pressure in which the valve must be withstood without a drop in performance after holding for one minute under prescribed pressure and returning to the operating pressure range. (value under the prescribed conditions)

Electrical Terminology

1. Apparent power (VA)

Volt-ampere is the product of voltage (V) and current (A). Power consumption (W): For AC, W = V·A·cos θ .

For DC, $W = V \cdot A$.

 
* cos θ shows power factor. cos $\theta \approx 0.9$

2. Surge voltage

A high voltage which is momentarily generated by shutting off the power in the shut-off area.

3. Degrees of protection

A degree defined in the "JIS C 0920: Waterproof test of electric machinery/appliance and the degree of protection against the intrusion of solid foreign objects."



First Digit:

Degree of protection against solid foreign objects

0	Not protected
1	Protected against solid foreign objects of 50 mmø and larger
2	Protected against solid foreign objects of 12 mmø and larger
3	Protected against solid foreign objects of 2.5 mmø and larger
4	Protected against solid foreign objects of 1.0 mmø and larger
5	Dust protected
6	Dust-tight

Second Digit:

Degree of protection against water

0	Not protected	_
1	Protected against vertically falling water droplets	Dripproof type 1
2	Protected against vertically falling water droplets when enclosure is tilted up to 15°	Dripproof type 2
3	Protected against rainfall when enclosure is tilted up to 60°	Rainproof type
4	Protected against splashing water	Splashproof type
5	Protected against water jets	Water-jet-proof type
6	Protected against powerful water jets	Powerful water-jet-proof type
7	Protected against the effects of temporary immersion in water	Immersible type
8	Protected against the effects of continuous immersion in water	Submersible type

Others

1. Material

NBR: Nitrile rubber FKM: Fluororubber

EPDM: Ethylene propylene rubber

2. Symbol

In the symbol (), when the valve is closed, flow is blocked from port 1 to port 2. However, if the pressure in port 2 is higher than port 1, the valve will not be able to block the fluid and it will flow from port 2 to port 1.





Be sure to read this before handling the products. Refer to the back cover for safety instructions. For 2-port solenoid valve for fluid control precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

Design

.Marning

1. Confirm the specifications.

Give careful consideration to the operating conditions, such as the application, fluid, and environment, and use within the specified operating ranges. If the product is used beyond the specification range, this may cause the product to break or malfunction. We do not guarantee against any damage if the product is used outside of the specification range.

2. Cannot be used as an emergency shutoff valve, etc. This product is not designed for use as an emergency shutoff valve or for use in other safety applications. If the valves are used in this type of system, other reliable safety assurance measures should also be adopted.

3. Cannot be used for pressure (including vacuum) holding This product is not suitable for holding the pressure (including vacuum) inside of a pressure vessel because air leakage is unavoidable.

4. Extended periods of continuous energization

- This is a valve for pulse operation. Do not energize it continuously. Since it consumes a large amount of air, the valve will oscillate (chatter) due to insufficient air supply on the inlet side, and this can lead to failure.
- 2) As the coil becomes hot when energized, set the energizing time to 1 s or less and the de-energizing time to at least twice the energizing time. Furthermore, do not touch the coil while it is being energized or right after it has been energized.

5. Reverse pressure

If there is a possibility that reverse pressure will be applied, take countermeasures by installing a check valve, etc., on the downstream side.

Do not disassemble the product and replacement parts, and do not make any modifications, including additional machining.

Doing so may result in human injury and/or an accident.

Operating Environment

⚠ Warning

Do not use the product in such locations as those described below.

1. Locations with atmospheres where water vapor is present or locations where corrosive fluids (chemicals), sea water, or water may come into contact with the product Implement appropriate protective measures if the product will be in contact with water for long periods of time, even for products which have IP65 or IP67 enclosures. Such water may enter through microscopic gaps in the product's external surfaces, resulting in fire damage or short-circuiting of the solenoid valve coils. If installing the product in close proximity to equipment such as machine tools, processing machines, etc., which use large amounts of liquids or oils, be sure to confirm that liquid dispersal or spatter from the peripheral equipment does not come into contact with the product.

2. Locations with explosive atmospheres

If the product is to be used in an explosive atmosphere, use the 56-JSXF (page 39) or the 55-JSXFA (page 41). Standard products without the "56-" or "55-" prefix cannot be used in explosive atmospheres.

- 3. Locations subject to vibration or impact
- 4. Locations where radiated heat will be received from nearby heat sources
- 5. Locations where freezing may occur within piping lines
 - 1) The product can be used in ambient and fluid temperatures as low as -40°C. However, take measures to prevent the freezing or solidification of impurities, etc.
 - 2) If the dew point temperature is high and the ambient temperature is low, or a large flow is being used, this may cause freezing. Be sure to periodically drain the product, or conduct drain removal using an air dryer, and retain the heat of the body.

Fluid

▲Warning

- 1. Take measures to prevent static electricity since some fluids generate static electricity.
- 2. Fluid temperature

Operate within the specified operating fluid temperature range.

- 3. Install a filter to ensure clean fluids.
 - 1) The use of a fluid that contains foreign matter may result in the accelerated wear of the valve seat and armature as well as a malfunction or seal failure caused by the foreign matter adhering to the sliding parts of the armature. Install a filter of 5 μm or less on the upstream side of the valve to remove foreign matter.
 - 2) Replace or clean the filter when the pressure drop reaches 0.1 MPa to prevent it from getting clogged.

Fluid Quality

⚠ Warning

- 1. Air
 - Do not use compressed air that contains chemicals, synthetic oils that include organic solvents, salt, corrosive gases, etc., as it can cause a malfunction or damage.
 - 2) Compressed air that contains excessive drainage may cause the malfunction of valves and other pneumatic equipment. Install an aftercooler or an air dryer on the inlet side of the valve to prevent drainage.
 - 3) If excessive carbon powder is generated by the compressor, it may adhere to the inside of the valves and cause a malfunction. Install a mist separator on the inlet side of the valve to remove any carbon powder.
 - 4) For compressed air quality, refer to the Best Pneumatics No. 6 catalog.
 - 5) When air with a dew point of -70°C or lower is used, it may cause the accelerated wear of the inside of the valve, shortening the life of the product.

Mounting

⚠ Warning

Ensure sufficient space for maintenance and inspection.

In addition, when using a silencer, ensure sufficient space to replace the silencer.

- 2. When mounting the product, avoid sources of vibration, or change the mounting method to avoid resonance.
- Do not install the product near a heat source. Be sure to install it in a location where the product will not be affected by radiant heat.
- 4. If air leakage increases or equipment does not operate properly, stop operation.

After installation or maintenance, check that the product is correctly mounted with appropriate functional and leakage inspections by supplying compressed air and power. Do not use the product if the equipment fails to operate correctly.

5. Do not touch the valve while it is being energized or right after it has been energized.

Valves will reach high temperatures after operation. Use caution as burns may be incurred if a hot valve is touched directly.





Be sure to read this before handling the products. Refer to the back cover for safety instructions. For 2-port solenoid valve for fluid control precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

Mounting

.Marning

6. Do not apply external force to the coil section.

When the product is installed, apply a wrench to the outside of the piping connection while making sure that it does not come into contact with the coil.

7. Do not warm the coil section with a heat insulator, etc. When insulation is used to prevent freezing, the insulation should be limited to the piping and body only. Do not insulate the coil. This can cause the coil to burn out.

∧ Caution

1. Installation of regulators and restrictors

If a regulator or restrictor is installed immediately before the inlet side of the valve or immediately after the outlet side of the valve, the valve will oscillate (chatter), resulting in a malfunction. Install it away from the valve or change the restriction amount.

Install a header tank of sufficient capacity on the inlet side of the valve.

This product is a large flow valve, so if the tank capacity is small, valve opening failure or valve oscillation (chattering) may occur due to pressure drop or insufficient air supply, resulting in a malfunction.

3. Painting and coating

Warnings or specifications printed or labeled on the product should not be erased, removed, or covered up.

Piping

⚠ Warning

 There may be cases in which the tubing detaches from the fitting and thrashes around uncontrollably due to tubing degradation or fitting breakage. To prevent this, fit the tubing with a protective cover or secure it in place.

∧ Caution


1. For handling One-touch fittings, refer to the "Fittings and Tubing Precautions" in the Handling Precautions for SMC Products on the SMC website.

2. Preparation before piping

Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil, and other debris from inside the pipe. Install piping so that it does not apply pulling, pressing, bending, or other forces on the valve body.

3. Winding of sealant tape

When connecting pipes, fittings, etc., do not allow any chips from the pipe threads and sealing material to enter the valve. Furthermore, when sealant tape is used, leave 1.5 to 2 thread ridges exposed at the end of the threads.

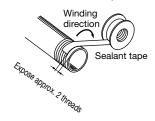

4. When using a fitting other than an SMC fitting

Follow the instructions given by the fitting manufacturer.

- 5. Avoid connecting ground lines to piping as this may cause the electric corrosion of the system.
- 6. When connecting piping to a product, avoid mistakes regarding the supply port, etc.

Piping

Direct Piping Type Piping Precautions

⚠ Caution

 Use steel tubes for the inlet and outlet piping of the valve.

2. Screw tightening torque for piping

When attaching fittings to valves, tighten within the tightening torque range shown below.

Tightening Torque for Piping

Connection thread	Proper tightening torque [N·m]
1/4	8 to 12
3/8	15 to 20
1/2	20 to 25
3/4	28 to 30
1	36 to 38
1 1/2	40 to 42

Compression Fitting Type and Bulkhead Fitting Piping Precautions

⚠ Warning

Do not use the compression fitting to support the valve piping. The piping could disconnect from the valve. Be sure to mount the valve to secured piping. (Compression fittings do not have a valve-holding function.)

∧ Caution

- 1. Use steel tubes for the inlet and outlet piping of the valve.
- 2. Tightening of the compression nut


Be sure to tighten the compression nut sufficiently to prevent the nut from loosening and leakage from occurring.


Wrench Tightening Angle after Hand-tightening (Guide for tightening the nut)

Size	Wrench tightening angle
3/4 (20A)	90° to 270°
1 (25A)	135° to 315°
1 1/2 (40A)	150° to 330°

- Mount the valve to secured piping.
- * Insert the piping until it stops to prevent the piping from going in at an angle.
- * Do not expose the piping to oil or moisture. Otherwise, the valve may come off easily.
- Sealing performance will decrease due to the deterioration of the seals. Tighten the compression nut regularly.

Cross section of the nut

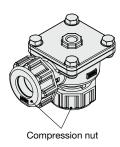

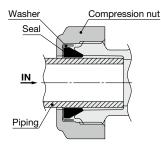



Be sure to read this before handling the products. Refer to the back cover for safety instructions. For 2-port solenoid valve for fluid control precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

Piping

Immersion Type Piping Precautions


⚠ Caution

 
Installation of the immersion type

Refer to the figures below when installing the valve on a tank provided by the customer.


Tighten and check the pipe assembly sufficiently to prevent leakage, looseness, and play.

Step 1) Insert the pipe assembly into the OUT port of the valve assembly and screw it in vertically. (Inserting the pipe at an angle may damage the O-ring inside the valve.)

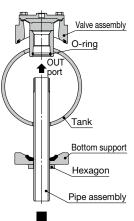



 - 1. Tighten with a wrench or other tool so that the bottom support does not rotate. Refer to a). (It can also be secured like in b).) When securing, align the tank with the curved surface of the bottom support.
- 2. Tighten the hexagonal part of the pipe assembly with a wrench.



Pipe Assembly Tightening Guide (Tightening torque)

Size	Tightening torque [N·m]
3/4 (20A)	30
1 (25A)	50
1 1/2 (40A)	50
2 (50A)	120

- * Excessive tightening may damage the valve or deform or damage the tank.
- * The pipe assembly may become loose due to vibration when discharging air. Be sure to perform periodic retightening.
- * The recommended tank is the ANSI Sch40. If making your own tank, ensure that it has sufficient strength to prevent it from becoming deformed when the valve is being screwed in.

SMARTVENT Type Piping Precautions

⚠ Caution


How to change the electrical entry direction

To change the electrical entry direction by yourself when piping, refer to the illustration below.

Before disassembly, be sure to turn OFF the power supply and pressure supply, and then release the residual pressure.

Step 1) Disassembly

1. Loosen the set nut and remove the two hexagon socket head set screws so the box assembly can be rotated.

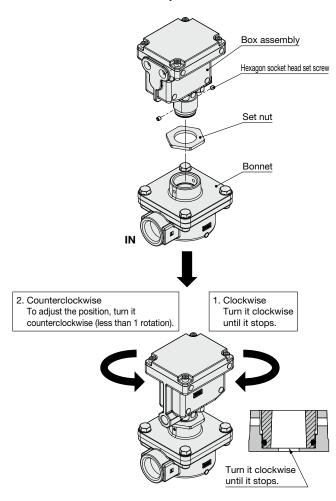

Step 2) Assembly

- 1. Turn the box assembly clockwise until it stops.
- 2. Turn the box assembly counterclockwise to the desired position.

Caution: Be sure to only turn it less than 1 rotation after it has stopped.

3. Tighten the set nut and then the hexagon socket head set screws. Refer to the table below for the tightening torque.

Table 1

Description	Size	Proper tightening torque
Set nut	Width across flats 46 mm	50 N⋅m
Hexagon socket head set screw	M5	1.35 to 1.65 N⋅m





[N·m]

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For 2-port solenoid valve for fluid control precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

Piping

 
Pilot Valve Enclosure Piping Precautions

⚠ Caution

1. Screw tightening torque for piping

When piping to the enclosure, tighten within the proper tightening torque range shown below.

Enclosure bottom surface



Tightening	Torque 1	for Piping
------------	----------	------------

		[]	
Piping position	Stations	Size	Proper tightening torque
Conduit port	6 stations	1/2	20 to 25
Conduit port	8 stations	3/4	28 to 30
IN port	6, 8	1/8	3 to 5
Bracket (Option B)	stations	M10	11 to 14

Wiring

 
∧ Warning

The solenoid valve is an electrical product. For safety, install an appropriate fuse and circuit breaker before use.

When using multiple solenoid valves, it is not sufficient to merely install one fuse. For protecting the equipment more safely, select an appropriate fuse to each circuit of the solenoid valve.

∧ Caution

- 1. As a rule, use electrical wire with a cross sectional area of 0.5 to 1.25 mm² for wiring.
- 2. External force applied to the lead wire If an excessive force is applied to the lead wire, this may cause faulty wiring. Take appropriate measures so that a force of 10 N or more is not applied to the lead wire. Do not bend the lead wires beyond 90° with a radius of less than 20 mm or damage may occur.



- 3. Use electrical circuits which do not generate chattering in their contacts.
- 4. Use voltage which is within ±10% of the rated voltage. In cases with a DC power supply where importance is placed on responsiveness, stay within ±5% of the rated value. The voltage drop is the value in the lead wire section connecting the coil.
- 5. When a surge from the solenoid affects the electrical circuitry, install a surge voltage suppressor, etc., in parallel with the solenoid. Or, use the product with a surge voltage suppressor.

Residual voltage of the surge voltage suppressor

 
DC specification: Approx. 60 V AC specification: Approx. 1 V

Wiring

∧ Caution

6. Leakage voltage

When the solenoid valve is operated using the controller, etc., the leakage voltage should be the product allowable leakage voltage or less. Particularly when using a resistor in parallel with a switching element and using a C-R element to protect the switching element, take note that leakage current will flow through the resistor, C-R element, etc., creating a possible danger that the valve may not turn off.



AC coil: 5% or less of rated voltage DC coil: 2% or less of rated voltage


Electrical Connections

⚠ Caution

1. Grommet

Lead wire: AWG20 Insulator O.D.: 2.6 mm


Rated	Lead wi	re color
voltage	1	2
DC	Black	Red
100 VAC	Blue	Blue
200 VAC	Red	Red
Other AC	Gray	Gray

 

- There is no polarity.
- 2. Conduit

Lead wire: AWG18 Insulator O.D.: 2.8 mm

Rated	Lead wire color		
voltage	1	2	3
DC	Black	Red	Green/Yellow
100 VAC	Blue	Blue	Green/Yellow
200 VAC	Red	Red	Green/Yellow
Other AC	Gray	Gray	Green/Yellow

 

- There is no polarity.
- * 3: Ground wire



Be sure to read this before handling the products. Refer to the back cover for safety instructions. For 2-port solenoid valve for fluid control precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

Electrical Connections

⚠ Caution

3. DIN terminal


- Disassembly
 1. After loosening the binding head screw with flange, then if the housing is pulled in the direction of the arrow, the connector will be removed from the solenoid valve.
- 2. Pull out the binding head screw with flange from the housing.
- There is a cutout on the bottom of the terminal block. Insert a small flat head screwdriver, etc., into this cutout, and remove the terminal block from the housing. (Refer to the figure below.)
- 4. Remove the gland nut, and pull out the washer and the rubber seal.

Wiring


- 1. Pass the cable through the gland nut, washer, and rubber seal in this order, and insert these parts into the housing.
- Loosen the binding head screw of the terminal block, then insert the core wire or the crimped terminal of the lead wire into the terminal, and securely fix it with the binding head screw. The binding head screw of the terminal block is M3.
 - *1 Tighten the screw to a torque of between 0.5 and 0.6 N·m.
 - *2 Cable O.D.: ø6 to ø12 mm
 - *3 For an outside cable diameter of ø9 to ø12 mm, remove the internal parts of the rubber seal before use.

Assembly

- 1. Pass the cable through the gland nut, washer, rubber seal, and the housing in this order, and connect to the terminal block. Then, set the terminal block inside the housing. (Push in the terminal block until it snaps into position.)
- Insert the rubber seal and the washer in this order into the cable entry of the housing, and then tighten the gland nut securely.
- 3. Insert the gasket between the bottom part of the terminal block and the plug attached to the equipment, and then insert the binding head screw with flange from the top of the housing, and tighten it.
 - *1 Tighten the screw to a torque of between 0.5 and 0.6 N·m.
 - *2 The orientation of the connector can be changed in steps of 90° by changing the method of assembling the housing and the terminal block.

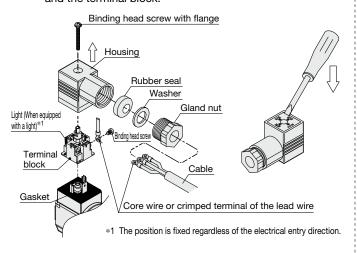

Internal connections are as shown below. Make connections to the power supply accordingly.

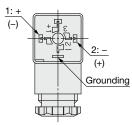


Terminal no.	1	2
DIN terminal	+ (-)	- (+)

* There is no polarity.

DIN (EN 175301-803) Terminal

This DIN terminal corresponds to the Form A DIN connector with an 18 mm terminal pitch.

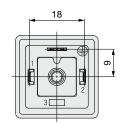


Applicable cable O.D.: ø6 to ø12

4. M12 connector

- The IP67 (enclosure) rating of the valve can be obtained by using a cable with a female connector of IP67 specification.
 Please note that this product cannot be used in water.
- 2. Do not use a tool to mount the connector as this may cause damage. Only tighten it by hand. (0.39 to 0.49 N·m)
- Avoid repeatedly bending or stretching the cable and applying heavy objects or force to it.
- 4. Do not pull the connector or cable unnecessarily.
- Do not bend the cable at the root of the connector when installed.

■ Coding and pin arrangement of the M12 connector on the valve side

 The shape (coding) and pin arrangement of the M12 connector are as follows.



* The solenoid valve has no polarity for DC voltages.

When using the cable with a female connector, make sure that the coding is correct. When installing the cable, be sure to align the key on the cable side connector (female side) with the key on the valve side connector (male side).

Be careful not to squeeze it in the wrong direction as pin damage, etc., may result.





 
Be sure to read this before handling the products. Refer to the back cover for safety instructions. For 2-port solenoid valve for fluid control precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

Electrical Circuits


⚠ Caution

1. DC circuit


Grommet




Grommet, Conduit, DIN terminal

 

DIN terminal

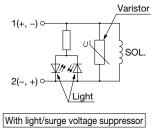



 

With surge voltage suppressor

2. AC circuit

The standard product is equipped with a surge voltage suppressor.


• Grommet, Conduit,
DIN terminal, M12 connector
Rectifier
element

(3)*1

SOL.

(4)*1

*1 For M12 connector
Without electrical option

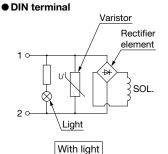



Replacing the Solenoid Coils

⚠ Warning

- 1. Before replacing the solenoid coil, turn OFF the power supply.
- 2. Due to the fluid temperature and the operating conditions, the solenoid coil may become extremely hot. Be careful when handling.


∧ Caution

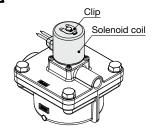

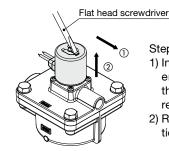


Step 1) Remove the coil.

- Insert a flat head screwdriver, etc., into the groove in the clip and slide it in the direction of ① to remove it.
- 2) Remove the coil in the direction of ②.

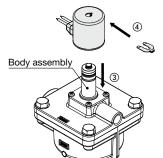


Step 2) Assemble the coil.

 - 1) Insert the replacement coil into the body assembly in the direction of ③.
- Insert the clip in the direction of (4) by aligning it with the groove in the top of the body assembly. The clip is directional. Refer to the figures below.



Be sure to confirm the clip direction (back and front) as well as the inserted condition.

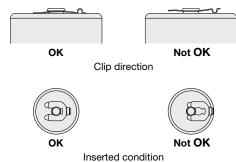

* When inserting the coil, be sure to push it in until the groove in the body assembly is visible.





Be sure to read this before handling the products. Refer to the back cover for safety instructions. For 2-port solenoid valve for fluid control precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

Appearance

⚠ Caution

- Surface treatment is applied to the product to improve corrosion resistance. There may be a spotted pattern on the surface depending on the treatment condition, but this does not affect usage or performance.
- 2. Rust may be generated on the solenoid coil depending on the operating environment and conditions, but this does not affect usage or performance.

Maintenance

.Marning

1. Removal of product

- 1) Turn OFF the fluid supply, and release the fluid pressure in the system.
- 2) Turn OFF the power supply.
- 3) Confirm that the valve temperature has dropped sufficiently before removing the product.

2. Replace or clean filters periodically.

Replace filters after 1 year of use or earlier if the pressure drop reaches 0.1 MPa.

3. Exhaust the drainage from air filters periodically.

If condensation in the drain bowl is not emptied on a regular basis, the bowl will overflow and allow the condensation to enter the compressed air lines. This may result in the malfunction of pneumatic equipment. If the drain bowl is difficult to check or remove, the installation of a drain bowl with an auto drain option is recommended.

4. Silencer

Prolonged use may cause clogging and changes in response characteristics. Replace it after using about 500,000 times. This number is subject to change based on fluid quality and energizing time.

5. Disassembly

Do not disassemble anything other than the main valve and solenoid coil. Doing so may result in a malfunction.

Refer to the "Disassembly/Assembly Procedure" on pages 16, 23, and 35 for part replacement instructions.

6. Low-frequency operation

Switch valves at least once every 30 days to prevent a malfunction. Also, in order to use them under the optimum state, conduct an inspection biannually.

7. Storage

In the case of long-term storage after use, thoroughly remove all moisture and store it in a location where the product is not exposed to sunlight and higher humidity to prevent rust and the deterioration of rubber materials, etc.

8. Perform maintenance and inspection periodically.

Confirm that the product is mounted correctly by conducting suitable function and leakage tests periodically. If air leakage increases or equipment does not operate properly, stop operation.

Dedicated Controller for Operation VXFC Series

Wiring

.Marning

 The controller starts its output the moment the power switch is turned ON. Be aware that even if the power switch is turned OFF, power is connected to the terminal block.

∴ Caution

- Make sure that the power supply voltage to be input matches the voltage in the controller's specifications. The power supply voltage that has been input becomes the voltage that is output to the solenoid valves.
- Connect a ground that is rated Class 3 or greater to the power supply terminal block's FG.
- **3.** If the power source is DC, be sure to confirm the polarity. If the polarity is incorrect, it may result in a malfunction or damage.
- 4. For details, please refer to the separate "Operation Manual."
- **5.** The solenoid valve mounted on the controller should be equipped with a surge voltage suppressor.

Operating Environment

∴Warning

- 1. Operate under conditions that are free of vibration and impact.
- 2. Operate in an ambient temperature range between $0\,^{\circ}\text{C}$ and $50\,^{\circ}\text{C}.$
- Operate in an ambient humidity range between 45% to 80% (no condensation).

Return of Product

. Marning

If the product to be returned is contaminated or is possibly contaminated with substances that are harmful to humans, for safety reasons, please contact SMC beforehand and then employ a specialist cleaning company to decontaminate the product. After the decontamination prescribed above has been carried out, submit a Product Return Request Sheet or the Detoxification/Decontamination Certificate to SMC and await SMC's approval and further instructions before attempting to return the item.

Please refer to the International Chemical Safety Cards (ICSC) for a list of harmful substances.

If you have any further questions, please don't hesitate to contact your SMC sales representative.



⚠ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)*1), and other safety regulations.

⚠ Danger: Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

⚠ Warning: Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

⚠ Caution: Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

*1) ISO 4414: Pneumatic fluid power - General rules and safety requirements for systems and their components ISO 4413: Hydraulic fluid power - General rules and safety requirements for systems and their components IEC 60204-1: Safety of machinery - Electrical equipment of machines - Part 1: General requirements ISO 10218-1: Robots and robotic devices - Safety requirements for industrial robots - Part 1:Robots

.⚠Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained

- 3. Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.
 - 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
 - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
 - 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- 4. SMC products cannot be used beyond their specifications. They are not developed, designed, and manufactured to be used under the following conditions or environments. Use under such conditions or environments is not allowed.
 - 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
 - 2. Use for nuclear power, railways, aviation, space equipment, ships, vehicles, military application, equipment affecting human life, body, and property, combustion equipment, entertainment equipment, emergency shut-off circuits, press clutches, brake circuits, safety equipment, etc., and use for applications that do not conform to standard specifications such as catalogs and operation manuals.
 - 3. Use for interlock circuits, except for use with double interlock such as installing a mechanical protection function in case of failure. Please periodically inspect the product to confirm that the product is operating properly.

⚠ Caution

SMC develops, designs, and manufactures products to be used for automatic control equipment, and provides them for peaceful use in manufacturing industries.

Use in non-manufacturing industries is not allowed.

Products SMC manufactures and sells cannot be used for the purpose of transactions or certification specified in the Measurement Act of each country. The new Measurement Act prohibits use of any unit other than SI units in

Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

Limited warranty and Disclaimer

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.*2) Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.
 - *2) Suction cups (Vacuum pads) are excluded from this 1 year warranty. A suction cup (vacuum pad) is a consumable part, so it is warranted for a year after it is delivered.

Also, even within the warranty period, the wear of a product due to the use of the suction cup (vacuum pad) or failure due to the deterioration of rubber material are not allowed by the limited warranty.

Compliance Requirements

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

Revision History

Edition B * An immersion type has been added.

- The ATEX compliant 55-JSXFA series has been added.
- * The number of pages has been increased from 16 to 20.
- Edition C * 3/4 (20A), 1 1/2 (40A), and 2 (50A) port sizes have been added to the immersion type * The number of pages has been increased from 20 to 24.
- Edition D * A solenoid valve type has been added.
 - UKCA compliance has been added.
 - \ast The number of pages has been increased from 24 to 44.
- Edition E * A SMARTVENT type has been added.
 - The number of pages has been increased from 44 to 52.
- Edition F * A bulkhead fitting has been added.
 - * A pilot valve enclosure has been added.
 - * An M12 connector cable option has been added.
 - * The number of pages has been increased from 52 to 60.

Safety Instructions Be sure to read the "Handling Precautions for SMC Products" (M-E03-3) and "Operation Manual" before use.

SMC Corporation https://www.smcworld.com